




quick guide

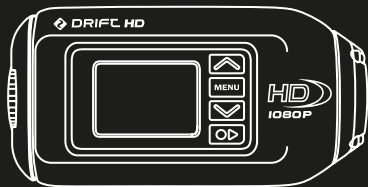

Thank you for purchasing the Drift HD

CUSTOMER SUPPORT

Check our official website for firmware updates, customer support, news about our products and videos from our users.

If you have any suggestions, comments or problems, please contact our customer support team at support@driftinnovation.com

WARRANTY



To obtain our warranty service, register your product at www.driftinnovation.com



contents



about your camera	3
package contents.....	5
getting started.....	7
basic menu settings.....	9
mounting the camera.....	10
specifications	11
disclosures	13

about your camera

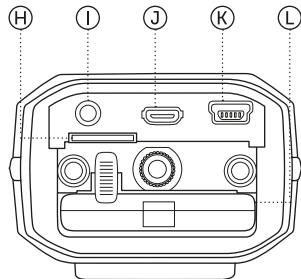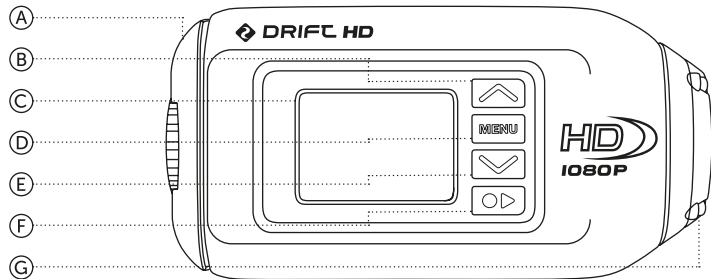

- Ⓐ Rear Hatch
- Ⓑ UP Button
- Ⓒ LCD Screen
- Ⓓ MENU Button
- Ⓔ DOWN Button
- Ⓕ SELECT Button
(On/Off/Rec/Stop) with LED
- Ⓖ Rotating Lens
- Ⓗ Micro SD Card Slot
- Ⓘ 2.5mm Microphone Input
- Ⓝ A/V HDMI Output
(Mini HDMI Connector)
- Ⓚ USB Port (Mini-B USB Connector)
- Ⓛ Battery Slot

package contents

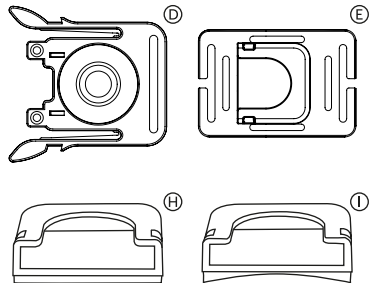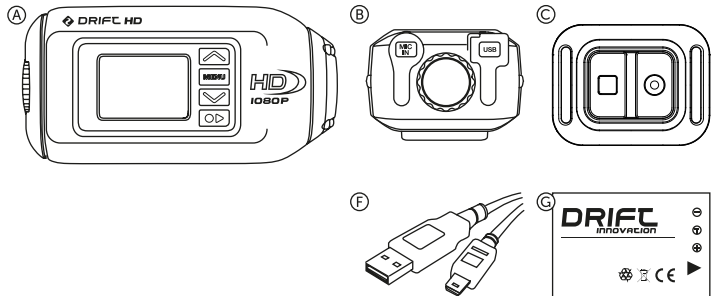

- (A) Drift HD
- (B) Connector hatch
- (C) Remote control
- (D) Universal clip
- (E) Goggle mount
- (F) USB cable
- (G) Rechargeable battery
- (H) Flat surface mount
- (I) Curved surface mount


getting started

GETTING READY

1. Open and remove the rear hatch
2. Insert a formatted Micro SD card
3. Slide battery into slot
4. Charge the battery for 4 hours before first use
5. Close the rear hatch

IMPORTANT

Check www.driftinnovation.com to ensure the latest firmware is installed on your device

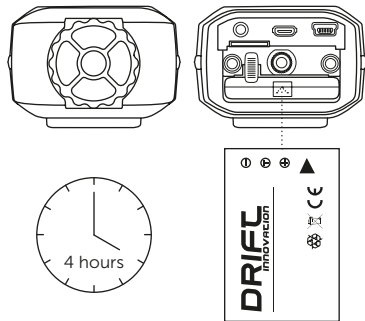

POWER UP AND DOWN

1. Press the SELECT button to turn the camera on
2. The LED will light up green, indicating the unit is on
3. You are ready to record video or take pictures
4. To power down, press and hold the SELECT button for 3 seconds


USING THE CAMERA

1. Select the desired recording mode
2. Select the desired resolution
3. Select Outdoor or Indoor mode, as appropriate
4. If using the waterproof case with your Drift HD, ensure the setting is selected (Photo mode only)

basic menu settings

MENU SETTINGS

1. Press the MENU button
2. The LCD will show the menu options
3. Scroll through the options
4. Use the SELECT button to choose the one you want
5. Press the MENU button to exit a menu setting or option

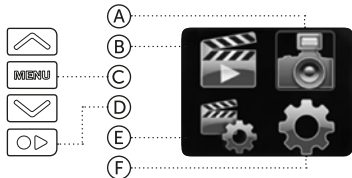



CAPTURING VIDEOS & PHOTO

You capture a video or take a photo depending on the camera settings. You can use either the camera or the remote control.

To start recording or to take a photo: Press the SELECT button on the camera or the RECORD button on the remote control

- (A) Photo viewing mode
- (B) Video playback mode
- (C) MENU button
- (D) SELECT button
- (E) Video configuration menu
- (F) Setup menu

mounting the camera

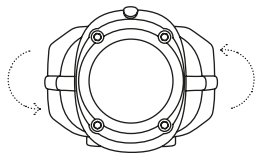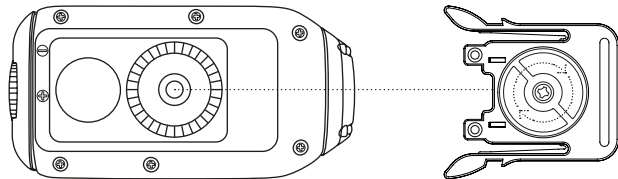

MOUNTING THE CAMERA

1. Attach the Universal Clip to the camera in any 360° orientation as needed, by rotating the screw base by hand
2. Check screen alignment, using the lens marker as an 'up' reference
3. Slide the Universal Clip into your chosen mount, ensuring that it 'clicks' into place

specifications

Video resolution:	1080p, 720p and SD
Video format:	16:9
File format:	.MOV (H.264 codec)
Sensor type:	CMOS
Frame rate:	1080p - 25 / 30 fps 720p - 25 / 30 / 50 / 60 fps SD - 25 / 30 / 50 / 60 / 90 fps
Recording angle:	1080p, 720p* and SD - 170° (* 127° at 60 fps)
Lens rotation:	300°
Lens focal range:	0.5m to infinity
Zoom:	x4 (digital)
Exposure:	Auto and Manual (advanced users)
Photo mode:	9 megapixels
Water resistant	
LCD Screen:	1.5" colour TFT
Built-in microphone	

Built-in memory:	32MB
Memory capacity:	Micro SD memory cards up to 32GB
Inputs:	2.5mm external microphone (not included)
Outputs:	HDMI connector type D (cable not included)
Connectivity:	USB Plug and Play, mini-B USB connector
Compatibility:	Windows XP and up / Mac OS 10.2 and up
Remote range:	3m (9.84ft)
Radio frequency:	433.92MHz ISM band
Camera:-	
Dimensions:	105 (L) x 50 (W) x 37 (D) mm
Weight:	120g
Power:	1110mAh rechargeable lithium-ion battery (included); DC 3.7V
Remote control:-	
Dimensions:	52 (L) x 40 (W) x 13 (D) mm
Weight:	19g
Power:	DC 3V (1xCR2032 battery included)

disclosures

FCC Information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

WARNING

Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

NOTE

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by powering the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna;

Increase the separation between the equipment and the receiver;

Connect the equipment into an outlet on a circuit different from that which the receiver is connected;

Consult the dealer or an experienced radio / TV technician for help.

follow us



www.facebook.com/driftinnovation



www.twitter.com/driftinnovation



www.vimeo.com/driftinnovation



www.flickr.com/driftinnovation

GET
OUT
THERE

