

ECP will repair or replace the defective parts and return them at ECP's cost by a shipping method selected by ECP. When contacting ECP to obtain an RMA, Purchaser may request expedited return shipping at Purchaser's cost.

THIS WARRANTY IS NOT TRANSFERABLE, AND, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IS IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS AND CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON OR REPRESENTATIVE IS AUTHORIZED TO MAKE ANY OTHER WARRANTY ON BEHALF OF ECP OR ASSUME FOR ECP ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. IN NO EVENT WILL ECP BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, INCLUDING DAMAGES DUE TO ECP'S NEGLIGENCE.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

La-Z-Boy is a registered trademark of La-Z-Boy Incorporated and is used under license by:

© 2008 Elexa Consumer Products
6200 N. Hiawatha Ave, 8th Floor,
Chicago, IL 60646

L A Z B O Y™

Comfort. It's what we do.

Touchscreen Control

Model LZ6200

**10 Function Universal Remote Control
With Touchscreen Keypad**

Installation Guide




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:







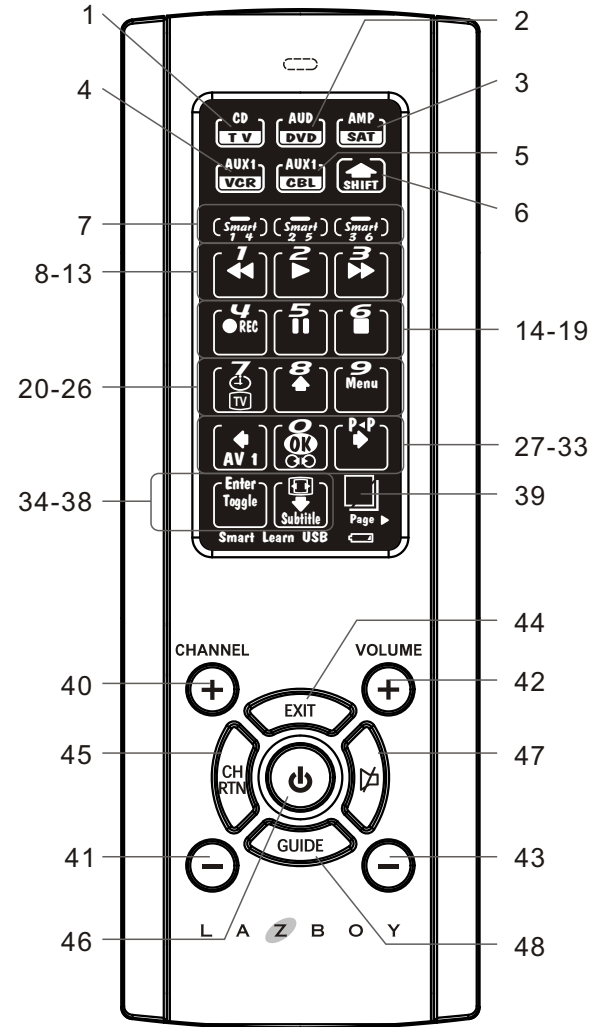





















- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by the manufacturer could void the user's authority to operated the equipment under FCC rules.

PRODUCT DIAGRAM



KEY FUNCTION DESCRIPTIONS

1.  -Programs your TV. Also programs your CD device using the shift key.
2.  -Programs your DVD Player. Also programs your Audio receiver using the shift key.
3.  -Programs your satellite receiver. Also programs your AMP/ Home Theater Receiver using the shift key
4.  -Programs your VCR. Also programs one auxiliary device using the shift key.
5.  -Programs your cable device. Also programs one additional auxiliary device using the shift key.
6.  -Allows you to program a 2nd tier of components into the TV, DVD, SAT, VCR, CBL. Can also allow you to access secondary functions of certain devices.
7.  -Allows you to program a sequence of steps such as turn on your TV, turn on your DVD player, turn on your home theater receiver, and press play on your DVD player to watch a movie. All in sequence. Each smart key can program up to 20 steps, use shift then smart 1. smart 2 or smart 3 to access a 2nd tier of smart keys. I "-" will pop up when the smart key is being learned.


8. **7** -Numeric key no.1.
9.  -Rewind when in VCR mode, scan back when in DVD, CD & DVR mode.
10. **2** -Numeric key no.2.
11.  -Access the play feature when in VCR, DVD, CD & DVR mode.
12. **3** -Numeric key no.3.
13.  -Fast forward when in VCR mode, scan forward when in DVD, CD & DVR mode.
14. **4** -Numeric key no.4.
15.  -Record when in VCR, DVR & DVD mode.
16. **5** -Numeric key no.5.
17.  -Pause when in VCR, DVD, CD & DVR mode.
18. **6** -Numeric key no.6.
19.  -Stop key when in VCR, DVD, CD & DVR mode.
20. **7** -Numeric key no.7.
21.  -Sleep. Allows you to set a timer to turn off the TV on some TV models equipped with this feature.
22.  -Switches the television back to regular viewing mode.
23. **8** -Numeric key no.8.
24.  -Scrolls up thru menus and guides.
25. **9** -Numeric key no.9.
26. **Menu** -Brings up the menu screen.
27.  -Scrolls left thru menus and guides.
28. **AV 1** -allows you to control the input source when in TV mode.
29. **0** -Numeric key no.0.
30.  -Allows access to the OK function when scrolling thru menus & guides.
31.  -Stereo. Switches the TV to stereo mode on some TV models equipped with this feature.
32. **P.P** -Picture in Picture. This allows you to access the picture in picture feature of your TV.
33.  -Scrolls right thru menu and guides.
34. **Enter** -Enter function for some Special AV equipment.
35. **Toggle** -Allows access to the toggle function from PIP back to normal picture.
36.  -Select viewing aspect ratio for TV.
37.  -Scrolls down thru menus and guides.
38. **Subtitle** -Allows you access to the subtitle feature of your DVD player or closed caption feature of your SAT or CABLE.
39.  -Page scroll key. Allows you to turn to the next page of the LCD screen. Each device has 3 pages of screens to scroll thru.
40. **CHANNEL +** -Changes the channels forward when in TV, DVR, Satellite or Cable mode.
41. **CHANNEL -** -Changes the channels backward when in TV, DVR, Satellite or Cable mode.
42. **VOLUME +** -Increase the volume of the device. Normally used in TV mode.
43. **VOLUME -** -Decreases the volume of the device. Normally used in TV mode.
44. **EXIT** -Exits on screen menu's and guides and returns you to the previous on screen selection.
45.  -Allows you to return to the previously selected channel in TV, SAT, or CABLE mode.
46.  -Turns devices for remote's current mode on or off.
47.  -Allows you to turn the volume on or off when in TV mode.
48. **GUIDE** -Brings up the guide screen when in SAT or cable mode.

Congratulations on the purchase of your La-Z-Boy Universal Remote Control, a state of the art product which integrates several infra-red devices to deliver complete A/V control at the tip of your fingers.

Before operating your remote please read through this manual carefully and save it for future reference.

This package contains the following:

- One LZ6200 Touchscreen Remote Control.
- One Installation Guide.
- One Quick Reference Guide.
- One Infra-red Device Code List.
- One LZ100 Charging Cradle.
- One Nickel Metal Hydride Battery Pack.
- One Power Adaptor.
- One USB Cable.

La-Z-Boy has evolved throughout their 75 year history to become America's Number 1 furniture brand.

The new line of La-Z-Boy Universal Remote Controls represents the perfect marriage of relaxation, comfort, ease of use, quality and convenience when watching television in your favorite La-Z-boy!

The La-Z-Boy Difference:

- Bilingual Consumer hotline available 24 hours/day, 7 days/week.
- Easy to follow quick reference guide.
- Comfortable rubber grips.
- Built in find feature...Never lose your remote again.
- On-line programming with on-line tutorial.
- Rechargeable batteries.
- Charging cradle/Docking station.

Table of Contents

Product Diagram/Key Function Descriptions ... Page 2

Introduction/Package Contents Page 5

Table of Contents Page 6

Getting Started Page 7

Battery Installation & charging cradle Information Page 8

How to find the Remote Page 10

How to set up your La-z-boy remote Page 11

- oBy code entry
- oBy code search
- oBy Learning
- oBy PC setup

How to operate your La-z-boy Remote Page 19

How to mute your La-z-boy Remote Page 19

Punch Through Page 20

Macro Power Page 22

How to Program the Smart Keys Page 23

Maintenance Page 24

Troubleshooting Page 25

Warranty Page 26


GETTING STARTED

A few helpful hints on terms used in this manual.

LR: La-Z-Boy Universal Remote Control

LED: The BLUE indicator light that flashes with an infra-red command to your equipment.

Backlighting: The backlighting on the LCD screen/keypad of your La-z-boy remote. Backlighting turns on each time a key is pressed and will turn off 8 seconds after the last key is released.


Battery Low:  If the battery meter located on the bottom right corner of the LCD screen appears and shows an empty battery, the battery pack needs to be recharged. Place your LR on to the charging cradle/docking station. The blue LED indicator blinks continuously, and turns off when charging is complete.

Shift: The shift key allows you to access a second tier of components with your remote. Please follow the instructions in this manual.

LCD Screen: Your LR is equipped with a touchscreen LCD display. Each programmed device has 3 pages to scroll thru for access to all functions. Please use the page scroll key located in the lower right hand corner of the LCD screen, as indicated in this manual.

1. HOW TO INSTALL BATTERIES

- Take off the battery case cover, then connect the battery connector into the remote unit.

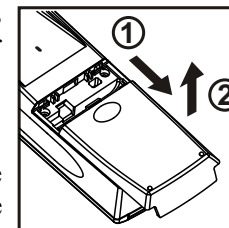



CAUTION ON BATTERY

- Be sure to use only the rechargeable nickel metal-hydride (Ni-MH) battery pack that is supplied with the remote controller.
- When loading, be sure to properly attach the rechargeable battery cable connector to the remote control socket.
- Be sure to properly dispose of the rechargeable battery pack in accordance with the guidelines (regulations) for your local area.

REPLACING THE BATTERIES

The batteries in the Remote control are Nickel Metal Hydride (Ni-MH) batteries. It is advised to change the batteries when the operation of your LR becomes unreliable and is unable to hold a charge.

If you want to order new batteries, please contact customer service. (1-888-229-1459)

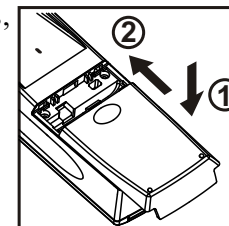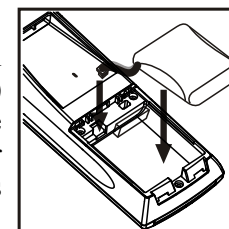

Warning:


Replace the batteries only with an original LR battery pack; otherwise the warranty is no longer valid and a hazardous situation could occur.

1.1. HOW TO CHARGE BATTERIES

When it is first unpacked, the supplied battery pack is not fully charged. Be sure to fully charge it before usage for a minimum of 12 hours.


Connect with AC Adapter

Connect the AC adapter to the charging terminal. The red LED indicator on the cradle will illuminate.

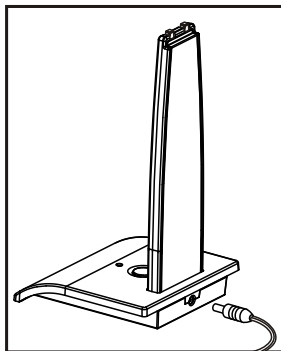

Resting on the Cradle

Put the remote unit on the docking charger. Be sure to align the contacts properly. The blue LED indicator will blink continuously to indicate the LR is charging.

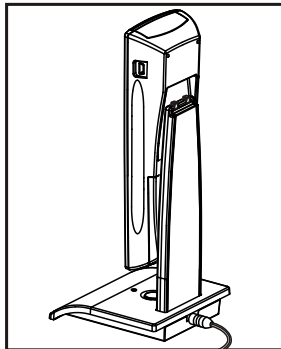


NOTES:

- When charging the remote control, be sure to always use the supplied AC adapter.
- Do not try to charge devices other than the remote control with the supplied AC adapter. This could damage the AC adapter or the connected device.

1.2. HOW TO FIND THE REMOTE

- Press find key on the charging cradle. The red LED indicator will flash 4 times.
- Your LR will emit a continuous series of beep tones.
- Press any key on the LR once it is located to turn off the beep tones. Note, the LR will emit a series of beep tones for 60 seconds if no key is pressed and then turn off.

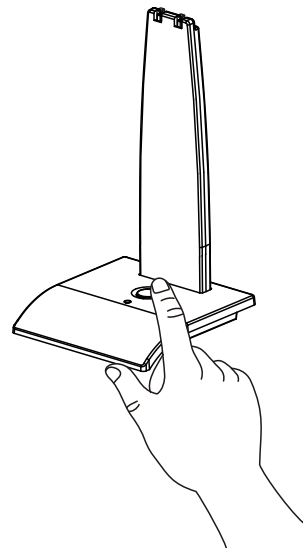

2. HOW TO SET UP YOUR LA-Z-BOY REMOTE (LR)

2.1. By entering Device Code

You may setup your La-Z-Boy Remote (LR) by the following code entering instructions.

- 2.1.1. Turn on your device (e.g. TV).
- 2.1.2. Refer to the LR Infra Red DEVICE CODE LIST; look up the 4-digit Device Code which corresponds to the brand of your A/V equipment. If there are more than one Device Code listed under your brand, try from the first code.
- 2.1.3. Press a desired Device Mode Key (e.g. TV). Device name icon is displayed with a frame.
- 2.1.4. Hold down "CHANNEL+" and "VOLUME-" on the LR simultaneously for 2 seconds until you hear 2 beep tones. The blue LED indicator lights continuously.
- 2.1.5. Use the number keys 0-9 to enter your 4-digit Device Code. The blue LED flashes twice if successful.

Then try the function keys (e.g. TV) on the LR. If your device (e.g. TV) responds to your activated function correctly, you have entered the right Device Code. Otherwise, repeat the above setup with the next available Device Code until your device (e.g. TV) responds to your activated function, and most keys work correctly.

* Simply repeat the above procedures to enter the Device Codes for your VCR, SAT, DVD and other Devices. (Remember to press a correct Device Mode Key in step 2.1.3 above). For set up of secondary devices, press "SHIFT" followed by the desired device key then follow steps 2.1.4-2.1.5 above.

Suggestion:

- If you cannot find a correct Device Code for your equipment, refer to the section that follows: How To Set Up The LR - By Searching Through the Library.
- For future reference it is recommended to make a note of your Device Codes on the label provided at the bottom of the charging cradle after setting up your LR correctly.

2.2. By Searching Through the Library

If you cannot identify a correct Device Code for your equipment from the Device Code list, you may search through the code library:-

- 2.2.1. Turn on your device manually (e.g. TV).
- 2.2.2. Press a desired Device Mode Key (e.g. TV). Device name icon is displayed with a frame.
- 2.2.3. Hold down "CHANNEL+" and "VOLUME-" on the LR simultaneously for 2 seconds until you hear 2 beep tones. The blue LED indicator lights continuously.
- 2.2.4. Enter a corresponding Search Code from following table. The blue LED indicator should flash twice and go out immediately.

DEVICE TYPE:	TV	VCR/ LASER DISC	SAT	CABLE	DVD	AUDIO	CD	HOME THEATER
SEARCH CODE:	0001	0002	0003	0004	0005	0006	0007	0008

(e.g. press TV device mode key, then press "CHANNEL+" and "VOLUME-", and enter The TV Search Code 0001.) The blue LED indicator should flash twice and go out immediately.

- 2.2.5. Press the same desired device mode key again as in step 2 above. (e.g. TV)
- 2.2.6. Hold down "CHANNEL+" and "VOLUME-" together simultaneously again for 2 seconds until you hear 2 beep tones. The blue LED indicator lights continuously.

2.2.7. Aim the LR at your device (e.g. TV); press the "⏻" (power) key repeatedly every 1-2 seconds until the device has been turned off. The blue LED indicator will blink once each time you press the "⏻" (power) key to indicate your remote is scrolling thru the code library. Once your device has been turned off, immediately press the same device mode key (e.g. TV) to lock in the search code and the blue LED indicator will flash 3 times and go out immediately.

- * Simply repeat the above setup procedures to search the Device Code for your VCR, SAT, DVD and other Devices. (Remember to press a correct Device Mode Key and correct Search Code in step 2.2.2-2.2.7 above).
- * For set up of secondary devices, press "SHIFT" followed by the desired device key then follow steps 2.2.3-2.2.7 above.

Note:

- The search process can take several minutes due to the number of codes stored in the library.
- You cannot search through the code library for DVR devices. This code must be entered manually from the device code list.

Important:

During set up mode, the blue LED indicator will blink six times and the set up procedure will be terminated if any of the following conditions occur;

- No key has been pressed for more than 8 seconds.
- An invalid code number has been entered.
- An invalid key (not a numeric key) has been pressed.

You can press **Smart 1**, **Smart 2** or **Smart 3** to exit the search mode at any time. The blue LED indicator will blink six times to indicate your remote has exited the search procedure.

Important:

When searching through the Library for some older devices, if the power on/off function of your device is not infra-red controlled you need to follow steps 2.2.2 to 2.2.6 above and start searching:

- Press "⏻" (power) key and another important function key alternately until your device responds to the expected function, press the same device mode key (e.g. TV) to lock in the code.
- Press "⏻" (power) key & "CHANNEL+" alternately, or;
- Press "⏻" (power) key & "1" alternately.

Note:

- Each time you press the "⏻" (power) key, the LR will skip to the next code and send out a POWER signal trying to turn off your device.
- If you failed to stop pressing the "⏻" (power) key in time when your device has been turned off, turn on your device again immediately. Before the blue LED indicator goes out, press "🔇" (mute) on the LR to skip backward. Repeat the step 7 above and lock in the code.
- If the blue LED indicator flash 6 times after you pressed the "⏻" (power) key, you are already at the last code of the library.
- Besides device keys, "⏻" (power) key and "🔇" (mute) key, all keys can be operated if the remote has entered search mode.

3. HOW TO SET UP YOUR LA-Z-BOY REMOTE (LR)

By Learning Commands

Your LR is equipped with learning capability. This allows you to "teach" your LR certain functions from your original equipment remote. Please follow the steps below.

- 3.1. Press the desired device mode key (e.g. TV). The device name icon is displayed with a frame.
- 3.2. Hold down "CHANNEL+" and "VOLUME-" on the LR simultaneously for 2 seconds until to hear 2 beep tones. The blue LED indicator lights continuously.
- 3.3. Enter the learning code "0", "0", "0", "0". The blue LED indicator flashes once and then stays lit continuously. The LR is now ready to learn commands. An icon "Learn" will also appear at the bottom of the screen.
- 3.4. Place the LR and your device remote on a flat surface, aimed at each other 1-3 inches apart.
- 3.5. Press a desired key once and release on the LR which you want to learn the command. The blue LED indicator will flash once on your LR and stays lit continuously.
- 3.6. Press and keep holding the key on your original equipment remote which you want to learn for a few seconds.
- 3.7. When the blue LED indicator flashes twice and stays lit continuously, the command has been learned successfully and you can release the key on your original equipment remote. If the blue LED indicator flashes **six times**, it shows an error in the learning process. Adjust the position of both remotes and repeat from step 3.5 again.
- 3.8. Repeat from step 3.5 to learn other key functions, or press the same device mode key on step 3.1 (e.g. TV) to terminate the learning mode, the blue LED indicator will flash **twice** and then go out immediately.

Note:

- On step 3.5 if no key is selected for more than 8 seconds, the blue LED indicator will flash **six times** and the learning mode will exit automatically.
- On step 3.6, if no other remote signal is received for more than 8 seconds, the blue LED indicator flashes **six times** and stays lit continuously, you need to select a desired key again for learning as in step 3.5 on your LR.
- Each function key will hold one command only, a new command to be learned will automatically erase and replace the previous one.
- If the device mode indicators flash **three times** during the transference of signals, the maximum 100 commands memory bank is full, press the same device key again to resume normal operation.
- All device mode keys, as well as the **SHIFT**, **Smart 1**, **Smart 2** and **Smart 3** keys cannot be used for learning functions.

4. HOW TO SET UP YOUR LA-Z-BOY REMOTE (LR)

By Teaching a dual signal

If you found a learned programmed key only works occasionally, your device remote may contain dual signals. Try the following steps to learn this command:

- 4.1. Follow the steps from 3.1 to 3.4.
- 4.2. Press a desired key once on your LR which you want to learn the command.
- 4.3. Press and keep holding the key on your original equipment remote which you want to learn for a few seconds.
- 4.4. When the blue LED indicator flashes twice and then stays lit continuously, the command has been learned successfully and you can release the key on your original equipment remote.
- 4.5. Press the same key on step 4.2 once on the your LR again.
- 4.6. Press and keep holding the same key on your device remote on step 4.3 until the blue LED indicator flashes twice and then stays lit continuously. The dual signal command has been learned successfully.
- 4.7. Repeat from step 4.2 to learn another key's dual signal, or press the same device mode key on step 4.1 (e.g. TV) to terminate the learning mode. The blue LED indicator will flash twice and go out immediately.

Note:

- On step 4.2 or 4.5 if no key is selected for more than 8 seconds, the blue LED indicator will flash **six times** and the learning mode will exit automatically.
- On step 4.3 or 4.6, if no IR signal is received for more than 8 seconds, the blue LED indicator will flash **six times** and stay lit, and you need to select a desired key again for learning as in step 4.2 or 4.5.

5. HOW TO SET UP YOUR LA-Z-BOY REMOTE (LR)

By PC SETUP

- Visit www.lazboyremotes.com.
- Select "support", then "code download".
- Connect your LR to your PC via a USB connection.
- An icon showing " **USB** " will appear at the bottom of the LCD screen.
- Click the LR online image on the screen to download the software interface.

5.1. A welcome screen will pop up

- Press next to continue.




5.2. Destination confirmation screen

- Press next to continue.



5.3. Completion and launch screen

- Press finish to complete the installation.
- Click "launch LR online" to immediately start up the software.

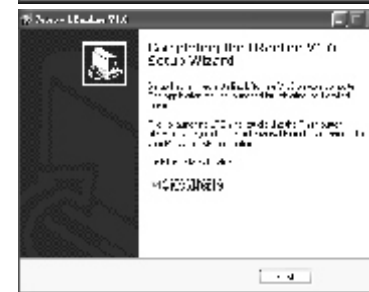

6. OPERATING THE LA-Z-BOY REMOTE (LR)

Normal Operation

- 6.1. Once you have setup up the LR for your A/V equipment, it works like your original remote controls. To operate, just aim it at your equipment, and press any key to illuminate the display. Then press an appropriate device mode key. You will hear a beep tone as confirmation of key touch.
- 6.2. Use the shift button when attempting to access secondary devices. Please refer to the Key Function Description. After you press the "SHIFT" key all functions will stay in shift mode. Press shift again to exit this mode.
- 6.3. The backlit keypad of the LR will turn OFF if no key is pressed for 8 seconds.
- 6.4. Your LR controls up to 10 devices. Press each device key directly to select the first 5. Press the "SHIFT" key and then a device key to select another 5. When accessing a device programmed with the shift key the device icon will change to indicate the new device (i.e. when using shift then TV, the device icon will change from TV to CD.)
- 6.5. To enable / disable the key tones sound, press and hold "CHAN+" and "MUTE" keys on the remote simultaneously for 2 seconds until the blue LED indicator flashes. If it flashes once, the "beep" sound is enabled, if it flashes twice, the "beep" sound is muted.

7. PUNCH THROUGH

You can activate certain functions like TV volume to be operated in other modes such as SAT. This is referred to as punch through. Please refer to the following procedure for activating this function.

7.1. To activate the Punch through Channel setting:

- 7.1.1. Press and hold "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep sounds. The blue LED indicator lights continuously.
- 7.1.2. Enter the punch through code "1", "1", "1", "0". The blue LED indicator will flash once and lights continuously.
- 7.1.3. Press desired device mode key. (e.g. TV)
- 7.1.4. Press "CHANNEL+" key.
- 7.1.5. Press desired channel code device mode key (e.g. SAT).
- 7.1.6. The blue LED indicator will flash **twice** and setting punch through mode will exit if the setting is activated.
- 7.1.7. Example: SAT channel is activated on TV mode.

7.2. To deactivate the Punch through Channel setting:

- 7.2.1. Press and hold "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator light continuously.
- 7.2.2. Enter the punch through code "1", "1", "1", "0". The blue LED indicator will flash once and light continuously.
- 7.2.3. Press desired device mode key. (e.g. TV)
- 7.2.4. Press "CHANNEL-" key.
- 7.2.5. The blue LED indicator will flash **twice** and setting punch through mode will exit if the setting is deactivated.
- 7.2.6. Example: Punch through Channel is deactivated in TV device mode.

Note:

- If the same device mode key is pressed **twice** during the activation process (7.1), the blue LED indicator will flash **six times**, indicating the punch through mode will exit and the punch through status will remain unchanged.
- Setting channel in punch through mode will activate both the "CHANNEL+" and "VOLUME-" key.

7.3. To activate the Punch through Volume setting:

- 7.3.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator lights continuously.
- 7.3.2. Enter the punch through code "1", "1", "1", "0". The blue LED indicator will flash once and light continuously.
- 7.3.3. Press desired device mode key. (e.g. TV)
- 7.3.4. Press "VOLUME+" key.
- 7.3.5. Press desired device mode key (e.g. SAT)
- 7.3.6. The blue LED indicator will flash **twice** and setting punch through mode will exit if the setting is activated.
- 7.3.7. Example: SAT volume is activated on TV mode.

7.4. To deactivate the Punch through Volume setting:

- 7.4.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds two beep sound. The blue LED indicator lights continuously.
- 7.4.2. Enter the punch through code "1", "1", "1", "0". The blue LED indicator will flash once and light continuously.
- 7.4.3. Press desired device mode key. (e.g. TV)
- 7.4.4. Press "VOLUME-" key.
- 7.4.5. The blue LED indicator will flash **twice** and setting punch through mode will exit if the setting is deactivated.
- 7.4.6. Example: Punch through volume is deactivated in TV device mode.

Note:

Setting volume in punch through mode will activate the "VOLUME+", "VOLUME-" and "⏮" keys.

8. MACRO POWER

The Macro Power allows you to turn a second device on or off at the same time. Follow the steps below to activate this function.

8.1. To activate the Macro Power setting:

- 8.1.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator lights continuously.
- 8.1.2. Enter the macro power code "1", "1", "2", "0". The blue LED indicator will flash once and light continuously.
- 8.1.3. Press desired device mode key. (e.g. TV)
- 8.1.4. Press desired device mode key. (e.g. SAT)
- 8.1.5. The blue LED indicator will flash **twice** and setting Macro power mode will exit if the setting is activated.
- 8.1.6. Example: SAT Macro power is activated on TV mode.

8.2. To deactivate the Macro Power setting:

- 8.2.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator lights continuously.
- 8.2.2. Enter "1", "1", "2", "0" Macro power code. The blue LED indicator will flash once and light continuously.
- 8.2.3. Press desired device mode key. (e.g. TV)
- 8.2.4. Press "⏮" key.
- 8.2.5. The blue LED indicator will flash **twice** and setting Macro power mode will exit if the setting is activated.
- 8.2.6. Example: Macro power is deactivated on TV device mode.

9. PROGRAM SMART KEYS

You can program a sequence of steps into your LR such as turn on your TV, turn on your DVD player, turn on your home theater receiver and press play on your DVD payer to watch a movie. All in sequence. You can also program a time delay in the sequence. Each smart key can program up to 20 steps. Please refer to the following procedure.

- 9.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator lights continuously.
- 9.2. Enter the smart code "0", "0", "0", "9". The blue LED indicator will flash once and light continuously. An icon "Smart" will appear at the bottom of the LCD screen.
- 9.3. Press desired Smart key. (e.g. Smart 1)
- 9.4. Press a command from the corresponding device mode and the blue LED indicator will flash once each time you press a key.
- 9.5. Press and hold the command if you want to setup the transmission period of this command (MAX delay is 60 seconds).
- 9.6. Repeat 9.4 to 9.5 until you finish the whole program and press the same SMART key (e.g. SMART 1) to store the program.
- 9.7. To program another smart, repeat 9.1 to 9.6 above.


Note:

- The LR comes with 6 SMART programs - Smart 1, Smart 2, Smart 3, Smart 4 (Shift + Smart 1), Smart 5 (Shift + Smart 2), Smart 6 (Shift + Smart 3) each with a maximum of 20 steps.
- On step 9.4, if 20 steps have been entered, the setup is saved automatically. Your LR will exit the smart key programming mode.

- On step 9.4, if no key is selected for more than 8 seconds, the blue LED indicator will flash **six times** and the smart key programming mode will exit automatically.
- To operate a programmed smart key sequence, aim your LR at the equipment. Press and release the SMART key you have programmed.

10. RESET TO FACTORY DEFAULT

- 10.1. Hold down "CHANNEL+" and "VOLUME-" keys on the remote simultaneously for 2 seconds until you hear two beep tones. The blue LED indicator lights continuously.
- 10.2. Enter the reset code "9", "9", "9", "9". The blue LED indicator goes out immediately. All settings are now cleared to factory default setting.
- 10.3. If your remote control is locked up for any reason, you can reset it by pressing the reset button inside the battery compartment. Please refer to below illustration.

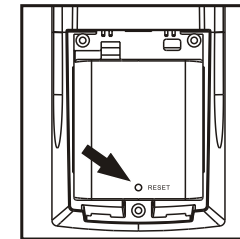

11. MAINTENANCE

- Do not expose your LR to dust, strong sunlight, humidity, high temperature or mechanical shock.
- Be sure to use only the rechargeable nickel metal-hydride (Ni-MH) battery pack that is supplied with the remote controller.
- Do not use corrosive or abrasive cleaners on your LR.
- Keep the unit dust free by wiping it with a soft dry cloth.
- Do not disassemble your LR; it contains no user-serviceable parts.

12. TROUBLESHOOTING

Q. My LR does not work at all!

- A. Check your A/V device, if the device's main switch is turned off, your LR can not operate your device.
- A. Check if your battery pack is connected properly and has been charged for a minimum of 12 hours. For details, please refer to section 1.
- A. Check whether you have pressed the correct device mode key for your device.

Q. If several Device Codes are listed under the brand of my A/V device, how can I select the correct Device Code?

- A. To seek the correct Device Code for you're A/V device, test the code one by one until most keys work properly.

Q. My A/V equipment responds to only some of the commands.

- A. You have set a code for which only some commands work properly but some do not. Try other codes until most keys work properly or go through the □By searching through the library□ in section 3. Or you may learn the functions from the original remote control (Please refer to section 4). You can also set up the LR unit by inputting the AV device model number from your computer after downloading the software interface from the La-Z-Boy website www.lazboyremotes.com. Please refer to section 6

Q. My combo device i.e. VCR/DVD can not be programmed using the codes provided.

- A. Try programming the devices individually i.e. first your VCR with the VCR codes from the code list and then the DVD with the DVD Codes from the code list. Or you can teach the LR by learning the functions from the original remote control.

Q. I do not hear the beep tones when pressing keys on my remote.

- A. You may have the keypad set to mute. Follow the steps in section 6.5.

Q. Some function keys on the remote do not operate your device.

- A. Make sure the LR is set to the correct mode (ie TV)
- A. The remote may not contain the code for your device. Try learning the codes you need from your original equipment remote. Follow the steps in section 4.

Q. I have a new home theater device and I can not find the code thru code search and code entry.

- A. Follow the How To Set Up Your La-Z-Boy Remote Thru PC Set Up in section 5. This online interface is updated regularly with new codes.

Q. I am having difficulty accessing the online programming feature.

- A. Make sure the internet connection is active
- A. Make sure your LR is connected to your computer through the USB cord provided
- A. Make sure your computer meets the following system requirements:
IBM compatible with windows 98SE, 2000, ME, XP, Vista.

For help with set up call **1-888-229-1459** or visit www.lazboyremotes.com for an on-line tutorial.

One Year Limited Warranty:

Elexa Consumer Products, Inc. ("ECP") warrants to the original retail purchaser ("Purchaser") that the La Z Boy™ Touchscreen Control LZ6200 (the "Product") will be free of defects in materials or workmanship under normal use for one (1) year from the date of purchase (the "Warranty Period").

For the Purchaser only, if the Product fails to perform as specified during the Warranty Period due to defective parts or faulty workmanship, ECP will repair or replace the defective or damaged parts of the Product. Normal wear and tear is not covered, nor is abnormal use, misuse, mishandling, faulty installation, improper shipping, damage caused by disasters such as fire, flood or earthquake, neglect, accident or tampering. This warranty covers only normal use in the United States and Canada.

To obtain warranty service during the Warranty Period, contact ECP Customer Service by telephone *1-888-229-1459* between the hours of 12am and 11:59pm, or email customersupport@elexausa.com for instructions on sending damaged parts and documentation and for a Return Material Authorization number (RMA). Products returned to ECP for repair or replacement without authorization will be returned to you at your expense. All warranty claims must be accompanied by a legible copy of the original receipt showing date and particulars of purchase. The RMA number must be clearly written on the side of the shipping container in which you return the Product or defective parts. Unless otherwise instructed by us, the Product must be sent freight prepaid to the following address:

**Elexa Consumer Products, 6200 N. Hiawatha Ave,
Chicago IL 60646**