



LEICA D-LUX 5

Anleitung / Instructions / Notice d'utilisation /
Istruzioni / Instrucciones

Dear Customer,

We would like to take this opportunity to thank you for purchasing this LEICA D-LUX 5. Please read these instructions carefully and keep them handy for future reference.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws.

Even for the purpose of private use, recording of certain material may be restricted.

Notice:

Please note that the actual controls, components, menu items, menu screen illustrations etc. of your LEICA D-LUX 5 may look somewhat different from those shown in the illustrations in these instructions.

Information for Your Safety

To reduce the risk of fire, burns, or shock hazard and annoying interference:

- **Use only the recommended accessories.**
- **Do not expose this equipment to rain or moisture, dripping or splashing water and make sure no objects filled with liquids such as vases are placed on the equipment.**
- **Do not expose to heat above 60 °C (140 °F).**
- **Do not remove the cover (back): there are no user serviceable parts inside.**

Refer servicing to your Leica dealer, an authorized Leica service station / the Leica distributor in your country (for addresses, see Warranty Card), or the Leica Customer Service department (for address (→74)).

- **The mains outlet must be located near the connected equipment and it must be easily accessible.**

FCC Note: (U.S. only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Declaration of Conformity

Trade Name: Leica
Model No.: LEICA D-LUX 5
Responsible party/
Support contact: Leica Camera Inc.
1 Pearl Court, Unit A
Allendale, New Jersey 07401
Tel.: +1 201 995 0051 232
Fax: +1 201 995 1684
e-mail: olesin@aol.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





FOR HOME OR OFFICE USE

Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.


THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13- AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below. If in any doubt please consult a qualified electrician.

■ IMPORTANT

The wires in this mains lead are coloured in accordance with the following code: Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF-KEEP DRY.

■ Before use

 
Remove the connector cover.

■ How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.



 2. Replace the fuse and close or attach the fuse cover.



■ About the battery

CAUTION

Battery (Lithium ion battery)

- Use the specified unit to recharge the battery.
 - Do not use the battery with equipment other than the specified unit.
 - Do not get dirt, sand, liquids, or other foreign matter on the terminals.
 - Do not touch the plug terminals (+ and -) with metal objects.
 - Do not disassemble, remodel, heat or throw into fire.
- If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.
- If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by Leica Camera AG (→46).
Dispose of used batteries according to the instructions (→44).

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

(U.S. only)



A recyclable lithium ion/polymer battery powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

This Class B digital apparatus complies with Canadian ICES-003.

■ About the charger

CAUTION!

- **DO NOT INSTALL OR PLACE THE CHARGER IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE IT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.**
- **DO NOT OBSTRUCT THE CHARGER'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.**
- **DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE CHARGER.**
- **DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.**

Charger

This charger operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the charger must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.

- The charger is in the standby condition when it is connected. The primary circuit is always "live" as long as the charger is connected to an electrical outlet.

■ Cautions for Use

- Do not use any other AV cables except the supplied one.
- Do not use any other USB connection cables except the supplied one.
- Always use the genuine Leica HDMI mini cable (available as accessory →46).

Keep the camera as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use the camera on top of or near a TV, the pictures and/or sound on the camera may be disrupted by electromagnetic wave radiation.
- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect the camera, disturbing the pictures and/or sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery. Then reinsert the battery and turn the camera on.

Do not use the camera near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

Table of Contents

Information for Your Safety	39
Scope of Delivery	46
Accessories	46
Names of the Components	47
Charging the Battery	50
About the Internal Memory/the Card	53
Inserting and Removing Card and Battery	54
Setting Date/Time (Clock Set)	55
• Changing the Clock Setting	55
Setting the Menu	56
Selecting the [REC] Mode	57
Program Mode	59
• Program Shift	60
Snapshot Mode	61
• Scene Detection	62
• AF Tracking Function	62
Exposure Compensation	63
Aperture- and Shutter-Priority Modes	64
• Aperture-Priority Mode [A]	64
• Shutter-Priority Mode [S]	64
Manual Exposure Mode	65
Recording Motion Pictures	66
Playing Back Pictures ([NORMAL PLAY])	67
Deleting Pictures	68
Using the Instructions on the supplied CD-ROM	69
Technical Data	70
Leica Service Addresses	73

Scope of Delivery

	Order No.
Rechargeable battery BP-DC10-E BP-DC10-U	18 719 18 720
Charger BC-DC10-E BC-DC10-U	423-092.001-010 423-092.002-010
Mains cable EU UK AUS TW CN KR	423-068.801-019 423-068.801-020 423-068.801-023 424-025.002-000 423-082.805-004 423-082.805-005 (delivery differs depending on markets)
Shoulder strap	423-092.001-014
Lens cap	423-092.001-018
Lens cap string	423-092.001-019
CD with instr. PDFs	423-092.001-016
USB cable	423-092.001-020
AV cable	423-092.001-022
Battery case	424-036.001-000
Hot shoe cover	423-092.001-015
Button template for Canada / Taiwan	423-092.001-025
Short instructions	93 357 -360 (delivery differs depending on markets)
Notice regarding registration and SW download	93 367
Warranty Card	439-399.100-026

Accessories


	Order No.
Everready case	18 722
Leather case	18 723
Soft leather case	18 724
Hand grip D-LUX 5	18 715
Electronic Viewfinder EVF1	18 716
HDMI mini cable	14 491
LEICA CF 22 Flash unit	18 694
Mini tripod	14 320
Tabletop tripod	14 110
Ball and Socket head	14 100

Notes:


- Cards are optional. You can record or play back pictures on the internal memory when you are not using a card.
- Check that all items belonging to the scope of delivery are included before using the camera.
- The items and their shape may differ depending on the country or area where the camera was purchased.
- Please dispose of all packaging appropriately (→44).

Names of the Components

- 1 Lens
- 2 Self-timer indicator
- AF Assist Lamp
- 3 Flash
- 4 Shoulder strap eyelet
- 5 Focus selector switch

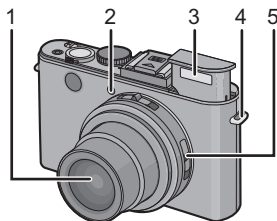

- 6 LCD monitor
- 7 [AF/AE LOCK] button
- 8 Playback button
- 9 Status indicator
- 10 [MENU/SET] button
- 11 [DISPLAY] button
- 12 [Q.MENU]/Delete button

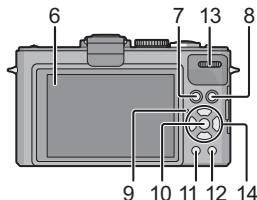

13 Rear dial

Rear dial operation is indicated as follows in these instructions:

e.g.:

Rotate to the left or to the right



e.g.:

Press



14 Cursor buttons

▲/[FOCUS] button

▼/Function button

Assign Menu to ▼ button. It is convenient to register a Menu that is used often.

[FILM MODE]/[QUALITY]/[METERING MODE]/[WHITE BALANCE]/

 
[AF MODE]/[I.EXPOSURE]/[GUIDE LINE]/[ REC AREA]/

[REMAINING DISP.]/[FLASH]/[AUTO BRACKET]/[ASPECT BRACKET]

◀/Self-timer button

▶/ISO

Cursor button operation, e.g. when one of them should be pressed, is indicated as follows in these instructions:



or

Press ▼

15 Aspect ratio selector switch

16 Microphone

17 Zoom lever

18 Motion picture button

19 Flash open switch


20 Hot shoe cover

- Keep the hot shoe cover out of reach of children to prevent swallowing.

21 Mode dial

22 Shutter button

23 Camera ON/OFF switch

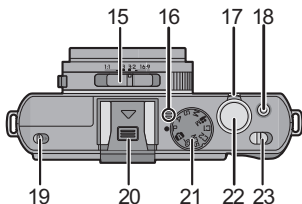


24 [HDMI] socket


25 [AV OUT/DIGITAL] socket

26 Lens ring front

27 Lens barrel

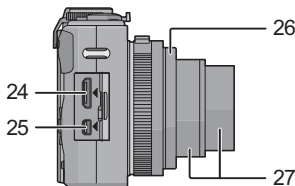

- 28 Tripod thread
- When you use a tripod, make sure the tripod is stable when the camera is attached to it.
- 29 Speaker
- Do not cover the speaker with your fingers.
- 30 Card/Battery door
- We recommend using a battery with sufficient power when recording motion pictures.
- 31 Release lever

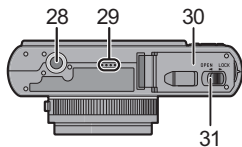

Charging the Battery

■ About batteries you can use with this camera

Use only the Leica battery BP-DC10 E/U (→46).

It has been found that counterfeit batteries which look very similar to the genuine product are made available to purchase in some markets. Some of these batteries are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these batteries may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery. To ensure safe operation we urgently recommend to use only the Leica battery BP-DC10 E/U (→46).


- Use only the specified charger and battery.
- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery supports this function. The only batteries suitable for use with this camera is the Leica battery BP-DC10 E/U (→46). (Batteries which do not support this function cannot be used.) Leica cannot in any way guarantee the quality, performance or safety of any other batteries.

■ Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.
- It is recommended to charge the battery in a temperature between 10 °C to 30 °C (50 °F to 86 °F). (The battery temperature should also be the same.)

1 Insert the battery into the charger.


- The terminals should face the charger's contacts and the Leica logo upwards.

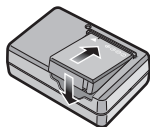


2 Connect the charger to the electrical outlet.

- Disconnect the charger from the electrical socket and detach the battery after charging is completed.

plug-in type

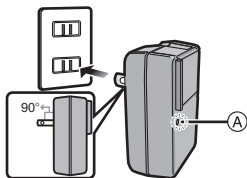

cable type

 

■ About the [CHARGE] indicator

The [CHARGE] indicator (A) turns on:

Charging has started.

The [CHARGE] indicator (A) turns off:

Charging has been completed without any problem.

• When the [CHARGE] indicator flashes

- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

■ Charging time

Charging time	Approx. 155 min
---------------	-----------------

■ Recording still pictures

[when using the LCD monitor/the Electronic Viewfinder EVF1
(available as accessory →46)]

Number of recordable pictures	Approx. 400 pictures	By CIPA standard in Program Mode
Recording time	Approx. 200 min	

Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Temperature: 23 °C (73.4 °F)/Humidity: 50%RH when LCD monitor is on.
- Using a 32 MB SD Memory Card.
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer function is set to [AUTO].)
- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

■ Playback

[when using the LCD monitor/the Electronic Viewfinder EVF1
(available as accessory →46)]

Playback time	Approx. 360 min
---------------	-----------------

About the Internal Memory/the Card

Internal Memory

- **Memory size: Approx. 40 MB**
- The internal memory can be used as a temporary storage device when the card being used becomes full.
- The access time for the internal memory may be longer than the access time for a card.

Card

The following cards which conform to the SD video standard can be used with the camera.

Type of card which can be used with the camera	Remarks
SD Memory Card (8 MB to 2 GB)	<ul style="list-style-type: none">• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.• Check that the PC and other equipment are compatible when using the SDXC Memory Cards.
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

- Only cards bearing the SDHC logo (indicating that the card conforms to SD video standards) may be used as 4 GB to 32 GB cards.
- Only cards bearing the SDXC logo (indicating that the card conforms to SD video standards) may be used as 48 GB and 64 GB cards.
- Use a card with SD Speed Class* with "Class 4" or higher when recording motion pictures in [AVCHD Lite]. Also, use a card with SD Speed Class with "Class 6" or higher when recording motion pictures in [MOTION JPEG].
 - * SD Speed Class is the speed standard regarding continuous writing.



Note


- Keep the Memory Card out of reach of children to prevent swallowing.

Inserting and Removing Card and Battery

- Check that the camera is turned off.
- Close the flash.

1 Set the camera ON/OFF switch to OFF, slide the release lever in the direction of the arrow, and open the card/battery door.


- Use only the Leica battery BP-DC10 E/U (→46).
- We cannot guarantee the quality of any other batteries.

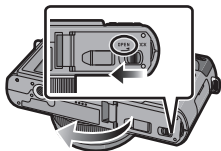

2 Insert battery and card. Be sure to insert in the correct orientation.

Battery: Push it in until it is locked by the lever (A). To remove, pull this lever in the direction of the arrow.


Card: Push it down until it clicks into place. To remove, push it further down until it clicks, then pull it out upright.

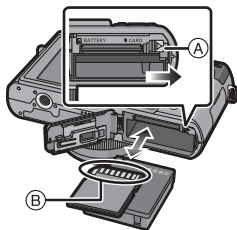

- (B): Do not touch the connection terminals of the card.
- The card may be damaged if it is not fully inserted.

3 **1:** Close the card/battery door.

2: Slide the release lever in the direction of the arrow.

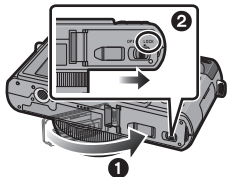


Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

1 Turn the camera on.

- (A) [MENU/SET] button
- (B) Cursor buttons

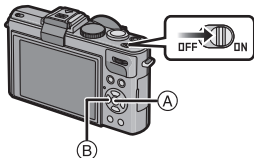

2 Press [MENU/SET].

3 Press ▲/▼ to select the language, and press [MENU/SET].

4 Press [MENU/SET].

5 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.



- You can cancel without setting the clock by pressing [⏏].

6 Press [MENU/SET] to set.

7 Press [MENU/SET].

- Press [⏏] to return to the settings screen.

Changing the Clock Setting

Select [CLOCK SET] in the [REC] or [SETUP] menu, and press ▶.

- It can be changed in steps 5 and 6 to set the clock.

Setting the Menu

This section describes how to select the [REC] Mode menu settings. The same setting can also be used for the [MOTION PICTURE], [PLAYBACK], and [SETUP] menus.

 
Example: Setting [AF MODE] from [] to [] in the Program Mode

1 Press [MENU/SET] to display the menu.



2 Press ▲/▼ to select [AF MODE] and then press ►.

- Depending on the item, its setting may not appear or it may be displayed in a different way.



3 Press ▲/▼ to select [] and then press [MENU/SET] to set.



4 Press [MENU/SET] to close the menu.

Switching to other menus

e.g.: Switching to the [SETUP] menu

 
1 Press [MENU/SET] to display the menu.

2 Press ◀.

3 Press ▼ to select the [SETUP] menu icon [].

4 Press ►.

- Select a menu item next and set it.




Selecting the [REC] Mode

1 Turn the camera on.

(A) Mode dial


- The status indicator (2) lights up when you turn the camera on (1). (It turns off after about 1 second.)

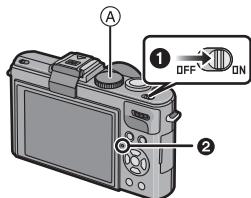

2 Change modes by rotating the mode dial.

Align the desired mode with index (B).

 - Make sure the dial is set exactly to the click-stop position of the desired mode. (The mode dial rotates 360°)



■ Basic

P Program Mode

For taking pictures with automatic exposure control.

A Snapshot Mode

For taking pictures with extended automatic settings.

■ Advanced

Aperture-Priority Mode

The exposure is determined by the automatically controlled shutter speed, based on the manually set aperture value.

Shutter-Priority Mode

The exposure is determined by the automatically controlled aperture value, based on the manually set shutter speed.

Manual Exposure Mode

The exposure is determined by the manually set aperture value and shutter speed.

Creative Motion Picture Mode

For recording motion pictures with manual settings.

Custom Mode

For taking pictures with previously registered settings.

Scene Mode

For taking pictures that match the scene being recorded.

My Color Mode

For taking pictures with one of twelve color modes, the effects of which can be checked before on the monitor.



Program Mode

The camera automatically sets both shutter speed and aperture value according to the brightness of the subject.

You can change various settings in the [REC] menu.

1 Set the mode dial to **[P]**.

- Set the focus selector switch to [AF].

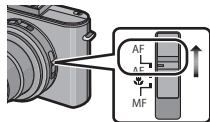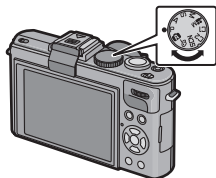

2 Aim the AF frame ① at the point you want to focus on.

3 Press the shutter button halfway to focus.

- The focus indication ② (green) lights up when the subject is focused.
- The focus range is 50 cm (1' 7 11/16") to ∞.



4 Press the shutter button fully to take a picture.



Program Shift

In Program Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called Program Shift. You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed.




- Press the shutter button halfway and then use the rear dial to activate Program Shift while the aperture value and the shutter speed are displayed on the screen (about 10 seconds).
- The Program Shift indication (A) appears on the screen when Program Shift is activated.
- Program Shift is canceled if the camera is turned off or the rear dial is rotated back until the Program Shift indication disappears, i.e. is set back to 0.

■ Example of Program Shift

(A): Aperture value

(B): Shutter speed

- ① Program Shift range
- ② Automatic camera setting
- ③ Program Shift limit

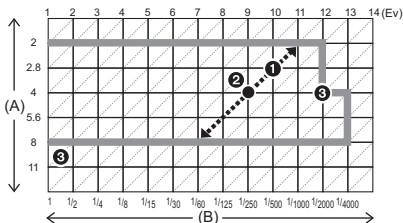

Snapshot Mode

The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.

1 Set the mode dial to **[A].**

2 Press the shutter button halfway to focus.

- The focus indication ① (green) lights up when the subject is focused.
- The AF frame ② is placed over the subject's face by the Face Detection function. In other cases, it is placed at the point on the subject which is in focus.
- The focus range is 1 cm (3/8") (Wide)/ 30 cm (1') (Tele) to ∞ .



3 Press the shutter button fully to take a picture.



Exposure Compensation

Use this function to adjust the exposure to the important part of the subject in case of large differences in brightness within the frame.

1 Press the rear dial to select , and then rotate it to compensate the exposure.

- Ⓐ Exposure compensation value
- Every time the rear dial is pressed, it switches the activated operation.
 - Exposure compensation operation is active when at the bottom left of the screen changes to orange.
 - The exposure compensation value can be set within a range of -3 EV to $+3$ EV.
 - Select only to return to the original exposure (0 EV).



2 Take a picture.

Aperture- and Shutter-Priority Modes

Aperture-Priority Mode **[A]**

Set the aperture value to a higher number when you want a larger in-focus area (in front of and behind the main subject), to a lower number for a smaller in-focus area.

- 1 Set the mode dial to **[A]**.
- 2 Rotate the rear dial to set the aperture value.
(A) Aperture Value
- 3 Take a picture.



Shutter-Priority Mode **[S]**

When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trailing effect, set to a slower shutter speed.

- 1 Set the mode dial to **[S]**.
- 2 Rotate the rear dial to set the shutter speed.
(B) Shutter Speed
- 3 Take a picture.



Manual Exposure Mode

Determine the exposure by manually setting the aperture value and the shutter speed.

1 Set the mode dial to **[M]**.

- The Manual Exposure Assistance (A) appears for about 10 seconds.

2 Rotate the rear dial to set the aperture and shutter speed.

(B) Aperture Value

(C) Shutter Speed

- Every time the rear dial is pressed, it switches between aperture setting and shutter speed setting operation.



3 Press the shutter button halfway.

- The Manual Exposure Assistance (A) appears for about 10 seconds.



4 Take the picture.

Manual Exposure Assistance

	The exposure is appropriate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The Manual Exposure Assistance is an approximation.

Recording Motion Pictures

You can record high definition motion pictures compatible either with the AVCHD format or Motion JPEG.


Audio will be recorded in monaural.

1 Select the desired mode with the Mode dial.

2 Start recording by pressing the motion picture button.

- (A) Available recording time
- (B) Elapsed recording time

- Motion pictures will be recorded in the aspect ratio set in [REC QUALITY] regardless of the position of the aspect ratio selector switch.
- Release the motion picture button right after you press it.
- The recording state indicator (red) (C) will flash while recording motion pictures.

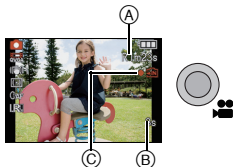

3 Stop the recording by pressing the motion picture button again.

- If the internal memory or the card becomes full during recording, the process will be stopped automatically.



Note

• With camera models 18 151 / 18 152:

Motion pictures can be recorded continuously in [MOTION JPEG] up to a capacity of 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen.


Maximum time to record motion pictures continuously with [AVCHD Lite] is 13 hours 3 minutes 20 seconds. Screen will only display up to 13 hours 3 minutes 20 seconds. However, the recording may stop before that depending on the remaining battery level.

• With camera model 18 150:


Motion pictures can be recorded continuously for up to 29 minutes. Also, motion pictures can be recorded continuously in [MOTION JPEG] up to a capacity of 2 GB. (Example: [8m 20s] with [1080i]) Remaining time for continuous recording is displayed on the screen.

Playing Back Pictures ([NORMAL PLAY])

1 Press .

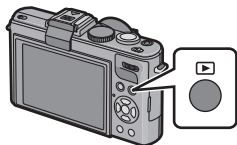

2 Press   to select the picture.

- After selecting a motion picture, press  to start playback.




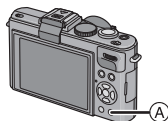
Deleting Pictures

Once deleted, pictures cannot be recovered.


- The picture being played back is deleted, regardless of whether it is recorded on the internal memory or the card.

1 Select the picture to be deleted, and then press .

Ⓐ  button



 2 Press  to select [YES] and then press [MENU/SET].



Using the Instructions on the supplied CD-ROM

- You have practised the basic operations introduced in these instructions and want to progress to advanced operations.
- You want to check the Troubleshooting.

In these kinds of situations refer to instructions (PDF format) on the supplied CD-ROM.

- 1 Turn the PC on and insert the supplied CD-ROM.**
- 2 Open the CD-ROM.**
- 3 Double click on the PDF with the desired language to open it.**

■ When the Instructions (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the instructions (PDF format).

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.
<http://get.adobe.com/reader/otherversions>

Technical Data

Image sensor	1/1.63" CCD sensor, total pixel number: 11,300,000, primary color filter
Effective pixels	10,100,000
Minimum illuminance	approx. 3 lx (when i-low light is used)
Lens	LEICA DC VARIO-SUMMICRON f/2.0 (wide) – 3.3 (tele) 5.1 – 19.2 mm ASPH. 35 mm camera equivalent: 24 – 90 mm
Focus range	
P/A/S/M	50 cm/1' 7 11/16" to ∞
Macro/ Snapshot	1 cm/3/8" (Wide)/30 cm/1' (Tele) to ∞
Scene modes	May differ from ranges above.
Digital Zoom	max. 4×
Shutter system	Electronically and mechanically controlled
Shutter speed	60 s to 1/4000 s, [STARRY SKY] mode: 15 s/30 s/ 60 s
Series exposures	
Low speed	
Exposure frequency	2.5 fps
Number of recordable pictures	max. 5/3 (Standard/Fine)
High speed	
Exposure frequency	approx. 10/6.5 fps (Speed/Image priority)

Number of recordable pictures	[2.5M (1:1), 3M (4:3), 2.5M (3:2) or 2M (16:9) is selected as the resolution.] approx. 15 when using the internal memory, immediately after formatting/ max. 100 when using a card (may differ depending on the type of card and the recording conditions)
Exposure modes	Program (P), Aperture-Priority (A), Shutter-Priority (S), Manual setting (M) Exposure compensation (increments: 1/3 EV Steps, range: ± 3 EV)
Metering modes	Multiple/Center weighted/Spot
Flash	Built-in pop-up flash unit
Flash modes	AUTO, AUTO w. Red-eye reduction, ON (ON w. Red-eye reduction), Slow sync. w. Red-eye reduction, OFF
Flash range (with ISO AUTO)	approx. 80 cm/2' 7 3/32" – 7.2 m/23' 7" (with maximum wide angle setting)
LCD monitor	3.0" TFT LCD (approx. 460,000 dots), shows approx. 100% of the captured frame
Microphone	Monaural
Speaker	Monaural
Recording media	Internal Memory (approx. 40 MB), SD/SDHC/SDXC Memory Card
Recording file format	
Still Pictures	RAW/JPEG (based on Exif 2.3 standard)/DPOF compatible
Motion pictures (with audio)	AVCHD Lite/QuickTime Motion JPEG

Operating temperature/humidity	0 ° – 40 °C/32 ° – 104 °F/10 – 80%RH
Interface	Digital: USB 2.0 (High Speed) (With model no. 18 150, data from the PC cannot be written to the camera using the USB connection cable.) Analog video/audio: NTSC/PAL Composite (Switched by menu), Audio line output (monaural)
Terminals	HDMI: for HDMI mini cable (type C) AV OUT/DIGITAL: Dedicated jack (8 pin)
Dimensions (W×H×D; lens retracted)	approx. 109.7×65.5×43 mm/ 4 5/16×2 9/16×1 11/16"
Weight (with/without card and battery)	approx. 271 g/0.597 lbs/233 g/0.514 lbs

Battery (lithium-ion)

Voltage/capacity	3.6 V/1250 mAh
-------------------------	----------------

Charger

Input	AC 110 – 240 V 50/60 Hz, 0.2 A
Output	DC 4.2 V 0.65 A

Leica Service Addresses

Leica Academy

As well as outstanding high-performance products for taking and viewing photographs, for many years we have also been offering the special services of the Leica Akademie, with practical seminars and training courses, which are intended to share our knowledge about the world of photography, projection and magnification with both beginners and advanced photographic enthusiasts.

The contents of the courses, which are run by a trained team of experts in the modern, well-equipped training suite at our Solms factory and in the nearby Gut Altenberg, vary from general photography to areas of special interest and offer a range of suggestions, information and advice for your own work.

More detailed information and the current Leica Akademie brochure are available from:

Leica Camera AG
Leica Akademie
Oskar-Barnack-Str. 11
D-35606 Solms
Phone: +49 (0) 6442-208-421
Fax: +49 (0) 6442-208-425
la@leica-camera.com

Leica on the Internet

Current information about products, news, events and the Leica company is available on our homepage on the Internet at:

<http://www.leica-camera.us>
<http://www.leica-camera.co.uk>

Leica information service

The Leica information service can provide you with an answer to any technical questions relating to the Leica range either in writing, on the telephone or by e-mail.

Leica Camera AG
Informations-Service
Postfach 1180
D-35599 Solms
Phone: +49 (0) 6442-208-111
Fax: +49 (0) 6442-208-339
info@leica-camera.com

Leica Customer Service

Leica AG's Customer Service center, or the repair service of the Leica national offices (see the Warranty Card for an address list), is available to assist you in maintaining your Leica equipment or in case of damage. Please contact your nearest authorised Leica dealer.

Leica Camera AG
Customer Service
Solmser Gewerbepark 8
D-35606 Solms
Phone: +49 (0) 6442-208-189
Fax: +49 (0) 6442-208-339
customer.service@leica-camera.com

- SDXC Logo is a trademark of SD-3C, LLC.
- The “AVCHD”, “AVCHD Lite” and the “AVCHD”, “AVCHD Lite” logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Leica is a registered trademark of Leica Microsystems IR GmbH.
- Summicron is a registered trademark of Leica Camera AG.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard (“AVC Video”) and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

AVCHD Lite TM



HDMI

DOLBY
DIGITAL
CREATOR



EU



ENGLISH

Errata:

The software available for downloading on the Leica Camera AG homepage after registering your camera is Adobe® Lightroom® 3!

(Not Adobe® Premiere® Elements®, as mistakenly stated in the instructions.)

DEUTSCH

Korrektur:

Die Software, die für Ihre Kamera nach der Registrierung kostenlos zum Download von der Leica Camera AG Homepage zur Verfügung steht, ist

Adobe® Lightroom® 3!

(Nicht Adobe® Premiere® Elements®, wie in der Anleitung irrtümlich vermerkt.)

FRANÇAIS

Errata:

Le logiciel disponible en téléchargement sur le site web Leica Camera AG après l'enregistrement de votre appareil photo est Adobe® Lightroom® 3!

(Et non Adobe® Premiere® Elements®, comme déclaré par erreur dans le mode d'emploi.)

ESPAÑOL

Errata:

El software disponible para descargar desde la página de inicio de Leica Camera AG luego de registrar su cámara es Adobe® Lightroom® 3!

(No Adobe® Premiere® Elements®, como se indicó erróneamente en las instrucciones.)

ITALIANO

Errata corrige:

Il software disponibile per il download sulla home page di Leica Camera AG dopo aver registrato la propria fotocamera è Adobe® Lightroom® 3!

(Non Adobe® Premiere® Elements®, come indicato per errore nelle istruzioni.)

NEDERLANDS

Errata:

De software die na registratie van het toestel beschikbaar is om gedownload te worden naar de home-pagina van de Leica Camera AG, is Adobe®

Lightroom® 3!

(Niet Adobe® Premiere® Elements®, zoals verkeerd in de instructies vermeld werd.)

中文

正誤表：

在 Leica Camera AG 的首頁上註冊了您的相機後下載並可用的軟體為 Adobe® Lightroom® 3 ！

（說明書中記述錯誤，不是 Adobe® Premiere® Elements®。）

简体中文

正误表：

在 Leica Camera AG 的主页上注册了您的相机后下载并可用的软件为 Adobe® Lightroom® 3 ！

（说明书中记述错误，不是 Adobe® Premiere® Elements®。）

日本語

正誤表：

ライカ・カメラのホームページで、ご登録後にダウンロードできるソフトウェアは Adobe® Lightroom® 3 です！

(Adobe® Premiere® Elements® ではありません。取扱説明書の記載は誤りです)



Leica Camera AG / Oskar-Barnack-Straße 11 / 35606 SOLMS / GERMANY
Telephone +49(0)6442-208-0 / Telefax +49(0)6442-208-333
www.leica-camera.com
93 357 / VQT3A33