



# 1MC30/60/120 Quick Reference Guide





## MAIN USER INTERFACE CONCEPTS

1. THE MEDIACENTER FEATURES ARE EASILY ACCESSED BY "POP UP" MENUS. ACCESS THE "POP UP" MENUS BY HOLDING DOWN THE "CENTER" KEY FOR 2 SECONDS. THIS FEATURE CAN BE ACCESSED FROM ANY PART OF THE SOFTWARE FOR VIEWING AND SELECTING DIFFERENT OPTIONS.
  - ALSO: > EXECUTES HIGHLIGHTED ITEM FROM POP UP MENU
  - > PLACES CHECK IN CORRESPONDING BOX OF FILE OR FOLDER.
2. THE "RIGHT" KEY: > WILL OPEN THE HIGHLIGHTED FILE OR FOLDER.
  - > VIDEO = PAUSE
  - > MUSIC = FAST FORWARD
  - > PHOTOS = CHANGE VIEW, SHOW EXIF INFO.
3. THE "UP" & "DOWN" KEYS SCROLL THROUGH FILE & FOLDER LISTS.
  - > VIDEO, PHOTO, MUSIC = PREVIOUS OR NEXT FILE IN LIST.
  - > MUSIC: HOLD DOWN "UP" TO ACCESS VOLUME CONTROL
4. THE "LEFT" KEY IS YOUR BACK BUTTON THROUGHOUT THE SYSTEM.

1. INSERT YOUR COMPATIBLE MEMORY CARD OR USB DRIVE INTO THE CORRESPONDING SLOT ON THE MEDIACENTER. MAKE SURE IT IS SECURE.
2. ONCE SECURE, THE MEDIACENTER WILL “MOUNT” THE MEMORY DEVICE TO THE MEDIACENTER. AN ICON WILL APPEAR TO ILLUSTRATE THIS PROCESS.
3. ONCE “MOUNTED” A POP UP MENU WILL APPEAR GIVING YOU THE FOLLOWING OPTIONS: BACKUP TO HDD, BROWSE, OR CANCEL. (SEE ILLUSTRATION # 1).
4. SELECT “BACKUP TO HDD” TO TRANSFER THE ENTIRE CONTENTS TO A DATED FILE IN “TRANSFERRED FOLDERS”. (SEE ILLUSTRATION # 2)
5. DO NOT REMOVE DURING TRANSFER

BACKING UP SELECT FILES

1. SELECT “BROWSE” FROM THE POP UP MENU OR SELECT THE MEMORY DEVICE FROM THE FILE EXPLORER SECTION.
2. PLACE A CHECKMARK NEXT TO THE FILES AND/OR FOLDERS BEING TRANSFERRED TO THE MEDIACENTER.
3. HOLD DOWN THE “CENTER” KEY TO ACCESS THE POP UP MENU.
4. SELECT “COPY TO” AND “HDD” FROM THE POP UP MENU. (SEE BELOW)
5. DO NOT REMOVE ATTACHED MEMORY DEVICE DURING TRANSFER.

ILLUSTRATION 1


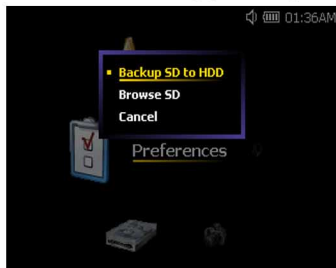


ILLUSTRATION 2



FILE EXPLORER VIEW WITH CF & SD CARD ATTACHED (BELOW)

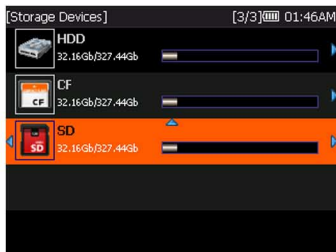

## TRANSFERRING FILES TO ATTACHED MEMORY CARDS AND USB DEVICES

1. WITH A MEMORY CARD ATTACHED, BROWSE THE FILE EXPLORER OF THE MEDIACENTER AND SELECT THE FILES YOU WISH TO TRANSFER TO AN ATTACHED MEMORY CARD OR USB DRIVE USING THE CENTER KEY TO PLACE A CHECK IN THE CORRESPONDING BOX. (ILLUSTRATION 1)
2. HOLD DOWN THE “CENTER” KEY TO ACCESS THE POP UP MENU, SELECT “COPY TO” AND THEN SELECT THE ATTACHED MEMORY DEVICE. (ILLUSTRATION 2)

ILLUSTRATION 1


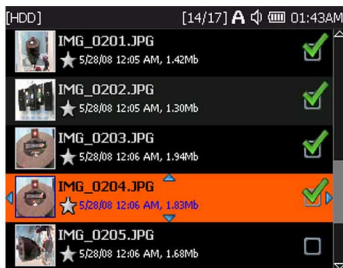


ILLUSTRATION 2(SD FOR EXAMPLE)



## TRANSFERRING FILES BETWEEN TWO MEMORY DEVICES

1. USE THE SAME PROCESS AS DESCRIBED ABOVE, SELECT THE FILES ON THE CARD YOU WISH TO TRANSFER FROM.
2. ACCESS THE POP UP MENU BY HOLDING DOWN THE CENTER KEY FOR 2 SECONDS.
3. SELECT “COPY TO” AND SELECT THE DEVICE YOU ARE TRANSFERRING TO.

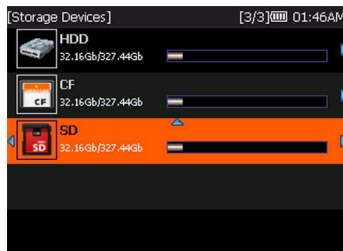

THE EXAMPLE OF ABOVE ILLUSTRATE THE TRANSFER FROM A SD CARD TO A CF CARD.

## TRANSFERRED FOLDERS, MY PHOTOS, MY MUSIC, MY VIDEOS

### TRANSFERRED FOLDERS

A FOLDER IS CREATED ONCE A FILE OR FOLDER HAS TRANSFERRED COMPLETELY. THE FOLDER CONTAINS THE DATE AND TYPE OF MEMORY DEVICE USED.(SEE ILLUSTRATIONS BELOW)



FIG 1



FIG 2

### MY MUSIC, MY PHOTOS, MY VIDEOS

EACH OF THESE FOLDERS APPEAR IN THE ROOT OF THE MEDIACENTER HARD DRIVE (FIG 1). THESE FOLDERS ALLOW YOU TO EASILY TRANSFER FILES FROM YOUR PC FOR ORGANIZED ACCESS ON THE MEDIACENTER

>PREFERENCE SETTINGS: THESE FOLDERS ARE ALSO ACCESSIBLE FROM THE PHOTO, MUSIC, & VIDEO LIBRARY'S ON THE HOME SCREEN YOU CAN CHANGE THE SETTING IN "PREFERENCES" TO NO IF YOU WANT THESE FOLDERS ACCESSED FROM THE FILE EXPLORER ONLY




## PHOTO VIEWING & BASIC FEATURES

YOU CAN VIEW ANY PICTURE FILE STORED ON THE DEVICE OR ON AN ATTACHED MEMORY CARD BY HIGHLIGHTING THE PICTURE (UP, DOWN) AND THEN PRESSING THE “RIGHT” KEY.

### “SEND TO” MEDIA LIBRARY

TO PLACE YOUR PHOTO FILES IN THE PHOTO GALLERY FOR EASY ACCESS FROM THE HOME SCREEN, SIMPLY SELECT THE FILES BY PLACING A CHECK IN THE CORRESPONDING BOX. YOU CAN SELECT AN ENTIRE FOLDER, AND THE MEDIACENTER WILL SORT ALL OF THE PHOTO FILES INTO THE PHOTO GALLERY.

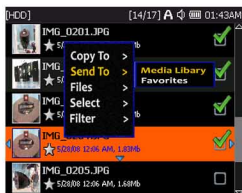

SELECT THE HIGHLIGHTED ACTION WITH THE “CENTER” KEY AND THE VIEWABLE PHOTO FILES WILL BE SYNCHRONIZED TO YOUR PHOTO GALLERY



ACCESS THE PHOTOS FROM THE “PHOTOS” SECTION OF THE HOME SCREEN USING THE “UP” AND “DOWN” KEYS AND THE “CENTER” KEY TO SELECT.

## PHOTO VIEWING FEATURES



DEFAULT VIEW



AVAILABLE EXIF INFO



FULL SCREEN

PRESS THE “RIGHT” KEY TO TOGGLE WHEN VIEWING

PRESS “UP” & “DOWN” TO ACCESS THE PREVIOUS OR NEXT PHOTO IN A LIST



SELECT CERTAIN PHOTOS BY PLACING A CHECK IN THE CORRESPONDING BOX WITH THE “CENTER” KEY (SEE LEFT)



HOLD DOWN THE “CENTER” KEY FOR THE “PLAY SELECTED” OPTION AND PRESS THE “CENTER” KEY TO VIEW ONLY THOSE FILES

## MUSIC PLAYER & BASIC FEATURES

MUSIC FILES STORED ON THE MEDIACENTER OR ON AN ATTACHED MEMORY CARD ARE PLAYABLE ON THE MEDIACENTER. SIMPLY OPEN THE FOLDER WHEN HIGHLIGHTED BY PRESSING THE "RIGHT" KEY. TO PLAY ALL OF THE FILES IN THE LIST PRESS THE "RIGHT" KEY AGAIN WITH THE FIRST FILE HIGHLIGHTED AND THOSE SONGS WILL BE ADDED TO THE "NOW PLAYING" SECTION.


### TO ADD SONGS TO THE MUSIC LIBRARY:



SELECT THE SONGS YOU WISH TO ADD TO THE MUSIC LIBRARY USING "CENTER" KEY TO PLACE "CHECK" IN BOX



HOLD DOWN THE "CENTER" KEY TO ACCESS POP UP MENU. SELECT "SEND TO" THEN "MEDIA LIBRARY"

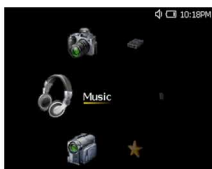


ACCESS THE MUSIC LIBRARY FROM THE HOME SCREEN USING THE "UP" & "DOWN" KEYS TO HIGHLIGHT THEN THE "CENTER" KEY TO OPEN THE LIBRARY



LIST OF ALL SONGS IN MUSIC LIBRARY. PRESS THE "RIGHT" KEY TO START PLAYING ALL OF THE SONGS IN THE LIBRARY.



MUSIC PLAYER


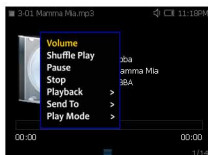


HOLD DOWN "CENTER" KEY FOR POP UP MENU OPTIONS

- "CENTER" KEY = PAUSE
- "LEFT" KEY GOES BACK ONE SCREEN (MUSIC PLAYS), HOLD DOWN = REWIND
- "RIGHT KEY HELD DOWN = FAST FORWARD
- "UP" = PREVIOUS SONG
- HOLD DOWN FOR VOLUME
- "DOWN" = NEXT
- PLAYBACK = PAUSE (PLAY), STOP
- SEND TO = MEDIA LIBRARY
- PLAYLIST
- FAVORITE LIST

PLAYLIST: "SEND TO PLAYLIST" INDIVIDUAL SONGS OR ALBUMS TO CREATE CUSTOM PLAYLISTS

NOW PLAYING: APPEARS IN MUSIC LIBRARY IF MUSIC HAS BEEN SELECTED FOR PLAYBACK

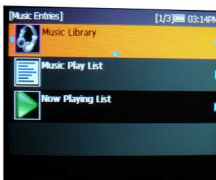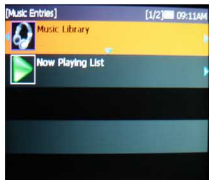


## VIDEO PLAYER & BASIC FEATURES

AS WITH PHOTOS AND MUSIC, VIDEOS ARE PLAYABLE FROM WITHIN ANYWHERE IN THE SYSTEM. YOU CAN UTILIZE THE PLAYLIST FEATURE, MEDIA LIBRARY, AND FAVORITES TO ORGANIZE ALL OF YOUR VIDEOS.




SELECT THE FILES AND/OR FOLDERS YOU WISH TO ORGANIZE

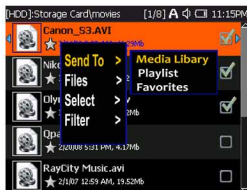


HOLD DOWN THE "CENTER" KEY TO ACTIVATE POP UP OPTIONS


MEDIA LIBRARY = ORGANIZE BY MEDIA TYPE  
PLAYLIST = IF FILES ARE SAME MEDIA WILL CREATE PLAYLIST  
FAVORITES = ACCESS FROM HOME SCREEN

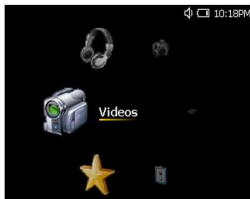

ACCESS YOUR VIDEO LIBRARY FROM THE HOME SCREEN

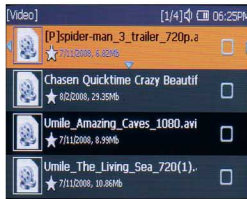

LIBRARY IS DISPLAYED. PRESS "RIGHT" KEY TO PLAY HIGHLIGHTED VIDEO.

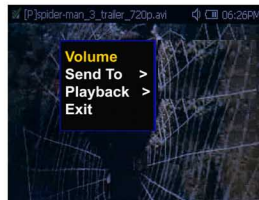

VIDEO PLAYBACK WITH POP UP OPTIONS (HOLD DOWN "CENTER" KEY)

NOTE: NOT ALL VIDEO FILES ARE COMPATIBLE FOR PLAYBACK ON HANDHELD DEVICES.

OPTIMAL PLAYBACK FOR THE MEDIACENTER IS:

320 x 240, 30 FPS, 128 KBPS BIT RATE.

DIGITAL CAMERAS AND DIGITAL VIDEO RECORDERS NEED TO BE SET ACCORDINGLY FOR INSTANT PLAYBACK AFTER TRANSFER.

FILES THAT ARE NOT COMPATIBLE FOR PLAYBACK CAN STILL BE STORED ON THE MEDIACENTER.

"RIGHT" KEY = PAUSE

"LEFT" KEY = HOLD DOWN TO GO BACK TO VIDEO LIST


"UP" / "DOWN" = PREVIOUS / NEXT VIDEO IN LIST

"CENTER" KEY = ACTIVATES POP UP MENU OPTIONS.

## PREFERENCES & SETTINGS:



ACCESS PREFERENCE SETTINGS FROM THE HOME SCREEN VIA "PREFERENCES".

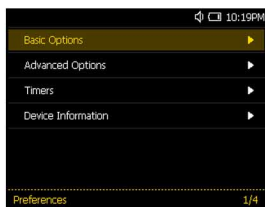

MAIN OPTIONS SCREEN  
"RIGHT" KEY TO SELECT  
HIGHLIGHTED ITEM




BASIC OPTIONS

SET TIME & DATE  
ADJUST VOLUME  
EXECUTE VIDEO OUT  
TV OUT SETTING

"RIGHT" KEY OPENS  
HIGHLIGHTED ITEM.

SETTING TIME & DATE

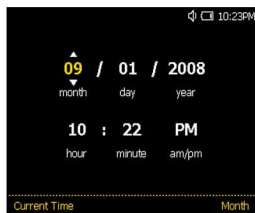

"RIGHT" KEY HIGHLIGHTS FIELD  
"UP", "DOWN" ADJUSTS FIELD  
"LEFT" KEY GOES BACK ONE  
SCREEN AND SAVES SETTINGS.


VIDEO OUT



YOU CAN CONNECT THE MEDIACENTER TO AN LCD SCREEN WITH A STANDARD A/V OUT RCA PLUG.

1. CONNECT THE CABLE TO THE MEDIACENTER AND THE LCD SCREEN OR TV
2. GO TO 'PREFERENCES' --> "BASIC OPTIONS" --> "VIDEO OUT" AND PRESS THE "RIGHT KEY"
3. THE MEDIACENTER SCREEN WILL PLAYBACK ON THE OUTPUT SCREEN.

## PREFERENCES & SETTINGS CONTINUED - ADVANCED OPTIONS / POWER MANAGEMENT

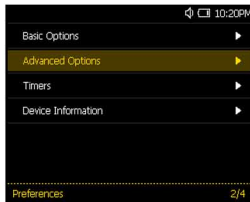

USE "RIGHT" KEY TO CHANGE ANY OF THE SETTING

CACHING IMAGES IN HDD: LOADS THUMBNAIL IMAGES FASTER WHEN PICTURE FILE DOES NOT HAVE EMBEDDED THUMBNAIL PREVIEW FILE.



SHOW GO MYFOLDER: SHOWS THE "MY PHOTOS", "MY MUSIC", "MY VIDEOS" FOLDERS FROM THE HDD ROOT IN THE MUSIC LIBRARY

USE FEEDBACK SOUND: PROVIDES AUDIBLE "CLICKS" WHEN YOU PRESS A KEY

BACKUP METHOD: DEFAULT IS "HIGH SPEED" MEMORY DEVICES WITH A CAPACITY LESS THAN 64MB NEED TO BE SET TO "NORMAL"

RESET BOOT IMAGE: CHANGE THE BOOT IMAGE TO ANY PICTURE STORED ON MEDIACENTER.

## POWER MANAGEMENT

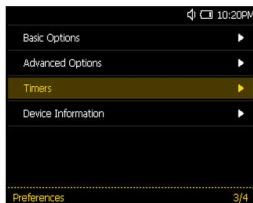
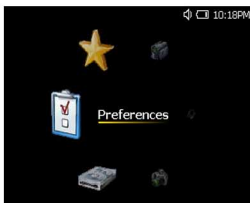


## DEFAULT TIMER SETTINGS:

LCD OFF TIMER: 30 SEC (DEFAULT), 1 MIN, 3 MIN, NEVER. BATTERY LIFE IS NEGATIVELY EFFECTED THE LONGER THE LCD IS LEFT ON.

POWER OFF TIMER: NEVER (DEFAULT), 1 MIN, 3 MIN, 5 MIN, 10 MIN. POWER OFF SEQUENCE IS INITIATED AFTER IDLE TIME HAS PASSED.

## DEVICE INFORMATION

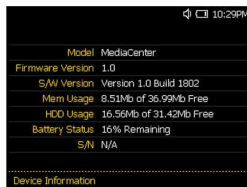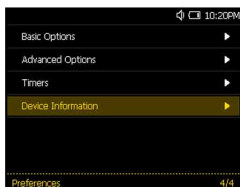

## DISPLAYS:

MODEL NAME

FIRMWARE VERSION

SOFTWARE VERSION

HDD USAGE

BATTERY STATUS

SERIAL NUMBER:

## SPECIAL FEATURES &amp; HEADER ICON DESCRIPTION

## 1. COPY TO HDD (APPEND MODE):

THIS IS AN ORGANIZATIONAL TOOL BUILT INTO THE MEDIACENTER. BY SELECTING THIS OPTION, YOUR FILES WILL BE TRANSFERRED INTO THE MOST RECENT "BACKUP" FOLDER CREATED THAT DAY. YOU CAN TAKE MULTIPLE TRANSFERS AND KEEP THEM IN A SINGLE FOLDER (SEE FIG. 1)



FIG. 1

## 2. SELECTING FILES USING "SELECT TO" AND "SELECT FROM"

"SELECT TO" - IF YOU WANT THE FIRST 10 FILES IN A LIST, SIMPLY SCROLL DOWN TO THE LAST FILE YOU WANT IN A LIST, HOLD DOWN THE "CENTER" KEY AND THE "SELECT TO" FEATURE WILL SELECT ALL OF THE FILES UP TO AND INCLUDING THE FILE YOU ARE CURRENTLY HIGHLIGHTING.

"SELECT FROM" - IF YOU WANT TO SELECT THE LAST HALF OF A FILE LIST, SCROLL TO THE FIRST FILE YOU WANT TO SELECT, HOLD DOWN THE CENTER KEY, AND THE "SELECT FROM" FEATURE WILL SELECT THAT FILE FIRST AND ALL OF THE FILES THAT FOLLOW TO THE BOTTOM OF THE LIST.

3. FILTERS: WHEN VIEWING A LIST OF FILES WITH MULTIPLE FILE TYPES, HOLD DOWN THE "CENTER" KEY. FROM THE POP UP MENU SELECT "FILTER" AND THE TYPE OF MEDIA YOU WANT TO SEE IN THE LIST. IT WILL FILTER OUT ALL OF THOSE FILES FOR EASIER BROWSING.

4. SORTING A TRANSFERRED FOLDER: ONCE FILES HAVE BEEN TRANSFERRED, YOU CAN QUICKLY ORGANIZE THE FOLDER INTO YOUR MEDIA LIBRARY. SIMPLY PLACE A CHECK IN THE CORRESPONDING BOX OF THE "BACKUP" FOLDER, HOLD DOWN THE "CENTER" KEY AND SELECT "SEND TO...MEDIA LIBRARY". YOUR MEDIA FILES WILL BE ORGANIZED INTO YOUR MEDIA LIBRARY FOR QUICK ACCESS FROM THE HOME SCREEN.

5. FAVORITES: YOU CAN ADD ANY TYPE OF FILE TO YOUR FAVORITES. FROM THE POP UP MENU SELECT "SEND TO FAVORITES" FROM THE POP UP MENU THESE FILES WILL BE PLACED IN YOUR "FAVORITES" SECTION ACCESSED FROM THE HOME SCREEN.

## HEADER ICONS:

[HDD] [14/17] A 🔊 📶 01:43AM

[HDD] CURRENT FILE LOCATION [🔋] BATTERY LEVEL

[14/17] FILE NUMBER / TOTAL IN LIST [01:43AM] TIME

A = ALL FILES BEING SHOWN  
(ICONS FOR PHOTO, MUSIC, VIDEO)

🔊 VOLUME ON / MUTE



## FCC Compliance Statement

For United States Users:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver
3. Connect the equipment into an outlet on a circular different from that to which the receiver is connected

**WARNING:** The connection of a non-shielded equipment interference cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels that exceed the limits established by the /FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity:

According to 47CFR, Part 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class Personal Computers:

We: Goldenhill Technology, Inc.

Located at: 5070 Robert J. Matthews Pkwy., Suite 200, El Dorado Hills, CA. 95762

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be complaint with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

Trade Name: MemoryKick  
Type of Product: Multimedia Photo Companion  
Model: 1MC30/60/120XX (“XX” refers to color)  
Product: MediaCenter Series 1

## MemoryKick, Inc. Limited Warranty

**What is Covered:** MemoryKick, Inc. (“MemoryKick”) warrants to this first retail purchaser that the MemoryKick product enclosed with this limited warranty statement, if purchased and used in the United States or Canada, will be free from defects in workmanship and materials for a period of one (1) year from the date of the original purchase. For warranty service, you must provide proof of the date of original purchase.

**What MemoryKick Will do to Correct Problems:** Should your MemoryKick product prove defective during the warranty period, please call the MemoryKick Service Center in the United States and Canada for warranty instructions and return authorization. A MemoryKick service technician will provide telephone diagnostic service to determine whether the product requires service. If needed, MemoryKick will, at its option, repair or exchange the product without charge for parts or labor. If the product requires repair or replacement, it is your responsibility to package it in its original container or an equivalent, along with proof of the date of original purchase and ship to MemoryKick. Packaging and shipping cost incurred in presenting your MemoryKick product for warranty service are your responsibility. Return shipping cost from the MemoryKick service repair facility is MemoryKick’s responsibility. When warranty service involves the exchange of the product or of a part, the item replaced becomes MemoryKick’s property. The replacement product or part may be new or refurbished to the MemoryKick standard of quality, and, at MemoryKick’s option, may be another model of like kind and quality. MemoryKick’s liability for replacement for the covered product will not exceed the original retail selling price of the covered product. Exchange products and parts assume the remaining warranty period of your original product covered by the limited warranty.

**What This Warranty Does Not Cover:** This warranty does not apply to refurbished or reconditioned products. This warranty covers only normal use in the United States and Canada. This warranty is not transferrable and will not apply to products purchased from an end user. This warranty does not cover damage to the MemoryKick product caused by parts or supplies not manufactured, distributed and certified by MemoryKick. This warranty does not cover third party parts, components or peripherals devices added to the Epson product after its shipment from MemoryKick. This warranty does not cover loss or recovery of any data or software stored in the product. MemoryKick is not responsible for warranty service should the MemoryKick label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightening, improper electrical current, software problems, interaction with non-MemoryKick products, or

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATES HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, NEITHER MEMORYKICK, INC. NOR ITS AFFILIATES SHALL BE LIABLE FOR ANY LOSS WHATSOEVER OF ANY NATURE OR KIND, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE MEMORYKICK PRODUCT, OR FOR LOST DATE OR LIST SOFTWARE WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OF LEGAL THEORY.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty last and some jurisdictions do not allow the exclusions or limitation or incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

To find the MemoryKick Authorized Reseller nearest you, visit our website at [www.memorykick.com](http://www.memorykick.com).

To find the MemoryKick Customer Care Center nearest you, visit <http://support.memorykick.com> or write to:

MemoryKick, Inc.  
5070 Robert J. Matthews Pkwy., Suite 200, El Dorado Hills, CA. 95762