

# SL100

Ultra-Dynamic  
On-Ear Headphones



## **Safety Information**

### **Please read this owner's and product guide**

Reading this guide will ensure proper and safe use of your Soul® headphones. Follow all operation guidelines and adhere to all safety warnings and cautions.

### **▲ Warning**

Use your headphones responsibly. Exposure to excessively loud noise can cause Noise Induced Hearing Loss (NIHL). "The loudness of sound is measured in units called decibels. For example, the humming of a refrigerator is 40 decibels, normal conversation is approximately 60 decibels, and city traffic noise can be 85 decibels. Sources of noise that can cause NIHL include motorcycles, firecrackers, and small firearms, all emitting sounds from 120 to 150 decibels. Long or repeated exposure to sounds at or above 85 decibels can cause hearing loss. The louder the sound, the shorter the time period before NIHL can occur. Sounds of less than 75 decibels, even after long exposure, are unlikely to cause hearing loss."

Source: <http://www.drif.org> . Additional information about preventing hearing damage may be found from The Consumer Electronics Association <http://www.ce.org>. World Health Organization <http://www.who.int>, Environmental Protection Agency <http://epa.gov>

Before plugging your Soul® headphones into your phone or multimedia device, make sure that the volume has been set to zero (0) and the power is off. Once you have turned on the device, increase the volume to a safe and comfortable level. Putting on your headphones and turning on at full volume may cause damage to your hearing.

Keep headphones out of reach of small children. These headphones are not a toy and could be harmful to small children.

Below is a chart to help you better understand the causes and effects of different sound levels. The noise levels are rated in dB (decibels)

Environmental Noise	Noise Level dB	Possible Effects of Exposure
Quiet Library	30 dB	No Effect - Normal
Normal Conversation	60 dB	Comfortable Hearing
City Traffic (inside car)	85 dB	Maximum Level before hearing damage begins. OSHA recommends no more than 8 hours of exposure to sound levels of 90 dB daily.
Power Saw at 3'	110 dB	Permanent Hearing Loss likely due to prolonged unprotected exposure.
Jet Engine at 100'	120 to 140 dB	At 125 dB the human ear begins to experience pain that can lead to permanent hearing loss even during short unprotected periods.

Sources: <http://www.drf.org> , The Consumer Electronics Association <http://www.ce.org>. World Health Organization <http://www.who.int>, Environmental Protection Agency <http://epa.gov> , and the Occupational Safety & Health Organization <http://OSHA.gov>

### **⚠ Caution**

**DO NOT** operate any motor vehicle or heavy machinery while listening to or wearing your headphones. Doing so is not only dangerous to you or others but illegal in many states. Listening or wearing headphones reduces your ability to hear sounds around you such as emergency vehicle sirens or the horn from another motorist.

It is not recommended to use headphones when cycling, running or walking in heavy traffic areas, where your full attention is necessary for your safety. Always use your headphones responsibly in every situation.

### Safety Instructions

Read all instructions before using your headphones.

Always keep the instructions for future reference.

Adhere to all warnings, cautions and suggestions in this owner's and product guide.

Keep your headphones dry and prevent exposure to moisture or water.

### At A Glance

1. SL100 Headphone
2. Earcup
3. Adjustable Headband
4. Audio Cable Input Jack
5. iPhone®, iPod® and iPad® control switch
6. 1/8" (3.5mm) Gold Plated Plug



## Box Contents

SL100 Headphones



Detachable Straight Audio Cable with In-Line Remote Control



Detachable Straight Audio Cable



Storage Road Case



Cleaning Cloth



## Using Your Soul® Headphones

Carefully remove your Soul® headphones from the protective storage road case. You will find the audio cables, adapters and cleaning cloth in the accessory box directly below the headphones. Gently open the headphones all the way one side at a time until you feel them lock into place.

## Headband Adjustment

Your Soul® headphones are fully adjustable for the most comfortable fit. Firmly hold the top headband with one hand and the bottom headphone portion with the other. Do not hold by the earcups when adjusting the headband as damage could occur. Gently slide the two sections up and down until you find the proper fit for you. The earcups are fully articulating so they will adjust to your head automatically when you put the headphones on. Once you have found the most comfortable fit you are ready to select and connect the audio cable.

### **Selecting and Connecting the Audio Cable**

Your Soul® headphones include two audio cables. The first cable includes the in-line remote control for use with an iPhone, iPod or iPad. The second cable is for use with all other multimedia devices such as a Blackberry®, Android™ phone, multimedia tablet or MP3 player. Once you have selected the proper cable, you are ready to connect to the headphone input jack. Both cables have straight and right angle plugs. Connect the straight plug into the headphone input jack. The input jack is located on the bottom left side of the headphone. You can identify the left side by the “L” on the inner headband portion of your headphone. Please ensure that the plug has been inserted all the way into the input jack.

Once you have found the proper fit and the audio cable has been connected you are ready to start enjoying the full range and quality of your Soul® headphones.

### **Headphone Maintenance**

Your Soul® headphones include a soft cleaning cloth located in the accessory box. Use the cloth to remove any fingerprints, oily residue or dirt from the headphone. When cleaning your headphones do not use an abrasive cloth as you could scratch the finish. Use a dry soft clean cloth to gently wipe the earcups and remove any dirt or dust buildup.

### **⚠ Caution**

Never use any harsh cleaning agents.

Keep your headphones dry at all times. Water could damage the sensitive circuitry inside your headphones.

## Using Your Soul® Headphones

Now that you have selected the proper cable and adjusted the headband it is time to plug in your headphones and begin enjoying your music the Sole® way.

1. Place headphones on your ears. Note: the headphones have an "L" for Left and "R" for Right indicators on the inside bottom portion of the headband. It is very important to place the headphones on your head correctly to get full sound benefit and maximize your listening experience.
2. Make sure that the volume is all the way down to zero.
3. Turn your device off.
4. Plug the 1/8" (3.5mm) right angle plug into the headphone jack of your phone or multimedia device.
5. Power Up your device.
6. Select the music or movie you wish to hear or view.
7. Slowly increase the volume level until you find the safe and appropriate listening level for you.

## ⚠ Caution

 
Use your headphones responsibly. Exposure to excessively loud noise can cause Noise Induced Hearing Loss (NIHL).

Never put headphones on when unit is at full volume as it may cause permanent damage.

## In-Line Remote Control Function and Diagram

### For Controlling Phone Functions


- 1. Answer/Hang Up** – During an incoming call press and release the center button (●) once to answer the call. Once you have completed your call press and release the center button once again to hang up the phone.
- 2. Call Rejection** – If you do not want to answer an incoming call, you can hold the center button for approximately two seconds. You will hear two beeps once you release the button that indicates the call was rejected.
- 3. Call Waiting** – During a call in progress, you may answer another incoming call by pressing the center button. This will place the existing call on hold while you answer the incoming call. If you want to switch to the original call press the center button again. That will place the second caller on hold while you go back to your original call. You may repeat again to go back to second caller.
- 4. Volume Control** - When you want to increase the volume of your phone, press the up arrow (▲) on your in-line controller.  
Note: Make sure to increase volume slowly to prevent damage to your hearing. When you want to decrease the volume on your phone, press the down arrow (▼) on your controller.



### For Controlling Music or Movie Functions

- 1. Volume Control** – When you want to increase the volume of your phone or multimedia device press the up arrow (▲) on your in-line controller.  
Note: Make sure to increase volume slowly to prevent damage to your hearing. When you want to decrease the volume, press the down arrow (▼) on your controller.

 - 2. Play or Pause** – To play a song or video, press and release the center button (●) once. To pause press and release the center button once during song or movie. To resume again, press and release center button once.
- 3. FFW/REW** – To skip forward to the next song or chapter in a movie, quickly press and release the center button twice. To return to the previous song or chapter in a movie, quickly press and release the center button three times.
- 4. Scan** – To scan forward during a song or movie, press and release the center button once, then immediately press and hold the center button again. This will scan forward. Release the button once you have reached the point in the song or movie you seek. To scan backwards during a song or movie, press and release the center button twice, then immediately press and hold the center button again. Release the button once you have returned to the portion of the song or movie you seek.



**Note: Not all functions may work on all models. Functionality will be determined by phone or multimedia device.**

### **In-Line Controller Compatibility Guide**

The following Apple models should have full functionality of the controller. iPhone® 4, and iPhone® 3Gs, iPad® Wi-Fi and iPad® 3G, iPod Touch® 4th Generation, iPod Touch® 3rd Generation and iPod Touch® 2nd Generation, iPod Nano® 5th Generation and iPod Nano® 4th Generation. For Android™ or BlackBerry® models, not all in-line controller functions may fully work.

### **Disconnecting Your Soul® Headphones**

Once you have finished using your Soul® in-ear headphones, disconnect from your device. Firmly hold your music or phone device. Pull the plug from the device by holding the plug. Store your headphones in the protective case to keep safe and clean. Always store the headphones in the case to prevent damage when not in use.

## **⚠ Caution**

Do not try to unplug the headphones by pulling on the cables as it may cause damage.

## **Trouble Shooting Guide**

<b>Problem</b>	<b>Solution</b>
No Sound	Check plug; make sure it is plugged in all the way. Check volume level, increase volume if necessary. Check power, make sure device is on. Check in-line controller, press center button to ensure it is not on Pause.
Low Volume Level	Make sure that the headphones are creating a proper seal around your ears. Increase the volume level on your device.
Only One Side Has Volume	Make sure that the plug has been inserted all the way into your device headphone jack. Check the connection to the headphone input jack. Make sure the plug has been inserted all the way.

Product Registration Website: <http://www.soulbyludacris.com>

**Note: You must register your product for warranty**

Customer Support Line: 1-800-566-7685(SOUL)

## **1 YEAR LIMITED WARRANTY**

SIGNEO USA, LLC ("Company") warrants to the original retail purchaser of this product that should the product or any part thereof are proven defective in material or workmanship within 1 year from the date of original purchase, such defects will be repaired or replaced, at the Company's option, without charge for parts or labor.

To obtain replacement within the terms of this warranty, the product should be delivered, transportation prepaid, to the Dealer where purchased or to the Company, along with proof of date of purchase. Call 1-800-566-7685 to obtain information regarding the procedure for proper return of your product, if your Dealer does not honor the warranty. This warranty is valid in the USA only.

**THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT OR PART THEREOF WHICH HAS BEEN DAMAGED THROUGH ALTERATION, CLEANING, MAINTENANCE, MISHANDLING, MISUSE, NEGLIGENCE, ACCIDENT, EXTERNAL CAUSES, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR. THIS WARRANTY ONLY APPLIES TO NONCOMMERCIAL USE OF THIS PRODUCT AND IS NOT TRANSFERABLE OR ASSIGNABLE.**

**THIS WARRANTY IS LIMITED, EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN CONTRACT OR TORT, WHETHER OR NOT ARISING FROM THE COMPANY'S NEGLIGENCE, ACTUAL OR IMPUTED. NO PERSON OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. IN NO EVENT SHALL COMPANY BE LIABLE FOR INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES. THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR MORE THAN THE PURCHASE PRICE OF THE PRODUCT.**

**This warranty gives you specific legal rights and you may also have other rights which vary from state to state, so some of the above limitations or exclusions may not apply to you.**



©2011 Signeo USA, LLC

1025 Greenwood Blvd, Lake Mary, FL 32746

All trademarks are the property of their respective owners.

iPhone, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

MADE IN CHINA

LITSL100-2  
VER.3/2011