

Digital Camera Fit Chart - Digital Series

- Total Coverage Tops
- Dual Foam Technology™
- Universal Memory & Battery Pockets
- Constructed of Ballistic Nylon
- Metal Hardware

Ultra-Thin Digital Camera Bag	Ultra-Compact Digital Camera Bag	Sub-Compact Digital Camera Bag	Compact Digital Camera Bag	Digital 1	Digital 2	Digital 3	Digital 4	Digital 6	Digital Zoom 3	Digital Double Decker
Model 5680	Model 5686	Model 5688	Model 5690	Model 5691	Model 5692	Model 5693	Model 5694	Model 5696	Model 5683	Model 5685
OTHER MODELS	5662, 5486, 5206	5490, 5214	5664, 5490, 5214	5664, 5492, 5208	5665, 5492, 5218		5494, 5220	5400, 5200		

Digital Cameras

CANON										
Powershot SD10, SD20, SD100, SD110, SD200, SD300	X									
Powershot S230, S400, S410, S500		X								
A200, A300, A310, A400, S45, S50, S60, S70				X						
A60, A70, A75, A80, A85, A95					X					
G3, G5, G6, S1 IS						X				
Pro1								X	X	X - with accessories X - with accessories
CASIO										
EX-24U, EX-M2, EX-M20U, EX-S2, EX-S20, EX-S20U, EX-S3, EX-S100, EX-Z3, EX-Z4, EX-Z30, EX-Z40, EX-Z50, EX-Z55	X									
QVR3, QVR4, QVR40, QVR51, QVR61			X							
EX-P600, EX-P700, QV-20					X					
QV-5700						X				
FUJI										
Finepix F402, F440, F450		X								
F420			X							
A120, A310, A330, A340, E500, E510, E550, F700, F710, F810				X						
30i, 2650, A200, A203, A205Z, A210, A303, F 401, F410Z, F601Z, F610, M603					X					
S3000, S3100						X				
2800Z, 3800							X			
S20, S5000, S5100, S602Z, S7000								X	X	
HEWLETT PACKARD										
R507, R607		X								
435, M307, M407				X						
320, 620, 635, 735, 812, 935					X					
R707						X				
715, 720, C618							X			
850, 945, C912								X		
KODAK										
CX6200, LS743, LS753					X					
CX4200, CX4230, CX4300, CX6230, CX6330, CX7220, CX7300, CX7330, CX7430, CX7530, CX7560, DX4330, DX4530, DX6340, DX6440, DX7440, DX7630, LS443						X				
DX6490, DX7590								X		
KONICA MINOLTA										
X, X20, X31, X50, Xg, Xi, Xt		X								
G400, KD300, KD400, KD500, KD510			X							
E323, F100, F200, F300				X						
G500, G600					X					
E223						X				
S414							X			
7, 7i, 7Hi								X		
A1, A2, A200, Z1, Z2, Z3, Z10								X	X	

Digital Camera Fit Chart - Digital Series

- Total Coverage Tops
- Dual Foam Technology™
- Universal Memory & Battery Pockets
- Constructed of Ballistic Nylon
- Metal Hardware

Ultra-Thin Digital Camera Bag Model 5680	Ultra-Compact Digital Camera Bag Model 5686	Sub-Compact Digital Camera Bag Model 5688	Compact Digital Camera Bag Model 5690	Digital 1 Model 5691	Digital 2 Model 5692	Digital 3 Model 5693	Digital 4 Model 5694	Digital 6 Model 5696	Digital Zoom 3 Model 5683	Digital Double Decker Model 5685
OTHER MODELS	5662, 5486, 5206	5490, 5214	5664, 5490, 5214	5664, 5492, 5208	5665, 5492, 5218		5494, 5220	5400, 5200		

Digital Cameras

Camera Model	Model 5680	Model 5686	Model 5688	Model 5690	Model 5691	Model 5692	Model 5693	Model 5694	Model 5696	Model 5683	Model 5685
KYOCERA											
Finecam SL300R, SL400R		X									
S3, S3L, S3R, S3X, S4, S5, S5R				X							
L30, L3V, L4V					X						
M400R							X				
M410R									X		
NIKON											
Coolpix 2100, 2200, 3100											
3200, 3700, 4100, 4200, 5200				X							
3500					X						
2000, 4300, 4800, SQ						X					
5000, 5400, 8400							X				X - with accessories
4500								X			X - with accessories
5700, 8700, 8800									X	X	X - with accessories
OLYMPUS											
D535, Verve Digital				X							
C50, C60, C7000, D390, D395, D540, D560, D565, D575, D580, Stylus 300, 400, 410					X						
C300, C5000						X					
C4000, C5050, C5060, C740, C750UZ, C765, C770							X				X - with accessories
C720UZ, C725, C730UZ									X		
C8080									X	X	X - with accessories
E1, E20N											X - with accessories
PANASONIC											
FX2, FX7, LC50, LC70, LC80				X							
F7, FX5					X						
LC20, LC33, LC43						X					
LC40							X				
F21, F22, F210, F23, FZ10K, F220, LC1, LC5									X		
PENTAX											
Optio S, S4, S4i, S5i	X										
330RS, 430RS, S30, S40, S50, SV				X							
33L, 450, 550, 555, 750Z, X					X						
30, 33LF, 230, 33WR, 43WR, 330GS						X					
SAMSUNG											
V3, V4, UCA 3, UCA4, D240, D360, D420					X						
D130, D200, D201, D220SE, D230, D340, D350SE						X					
D410							X				
SONY											
T1, T3, U40	X										
U10, U20, U30, U50		X									
L1, W1				X							
M1, P10, P32, P41, P72, P73, P8, P92, P93, P100, P150, T11, U60					X						
F88, P52, V1						X					
V3							X				
CD350, CD500, FD200, F828									X		
F717											5697 or X - with accessories
TOSHIBA											
PDR-3310, T10				X							
5300					X						
3300, 4300, M25						X					