



## Getting Started


**1** Connect the power adapter to the camera(s). Connect the other end to a power outlet.

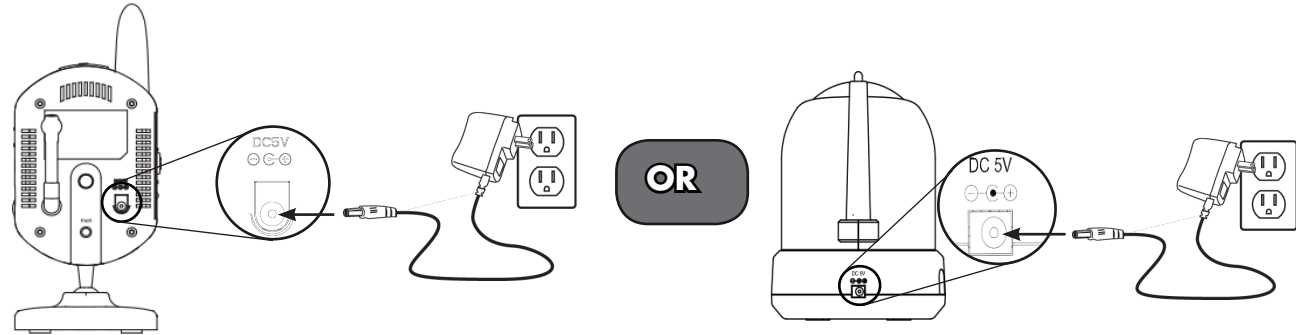

**2** Turn on the camera(s).

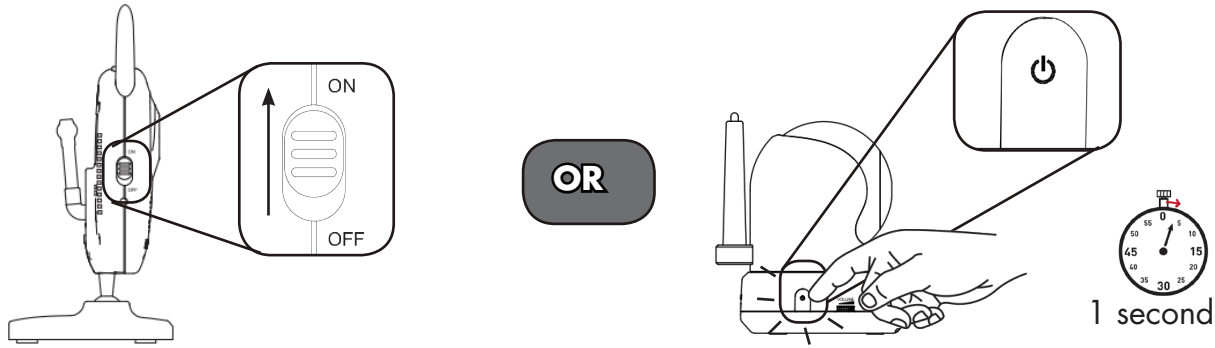


**3** Connect the cradle to your router using an Ethernet cable (included).

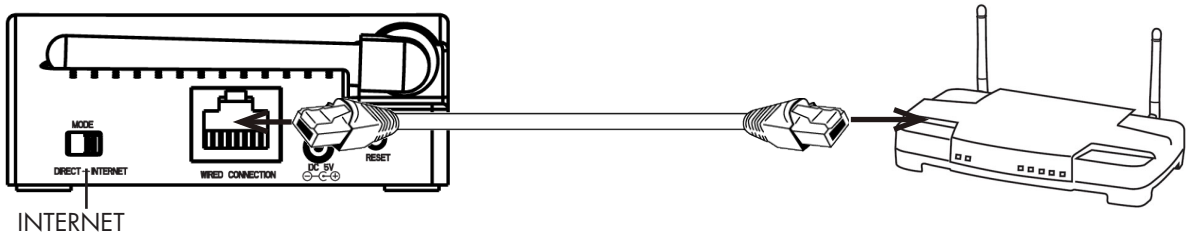


**NOTE:** Ensure the switch on the back is set to INTERNET mode. DIRECT mode is for service use only. Disconnect and reconnect the power adapter after changing to INTERNET mode.

**4** Connect the cradle power adapter to the cradle. Connect the other end to a power outlet.

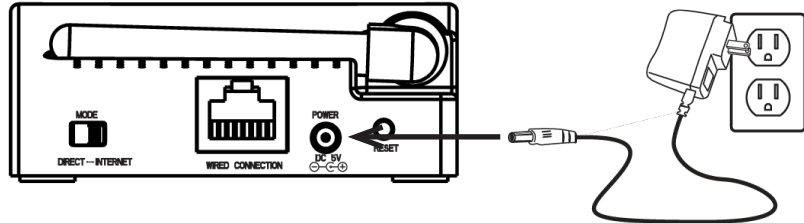

**5** Place the monitor onto the power/network connector on the cradle.

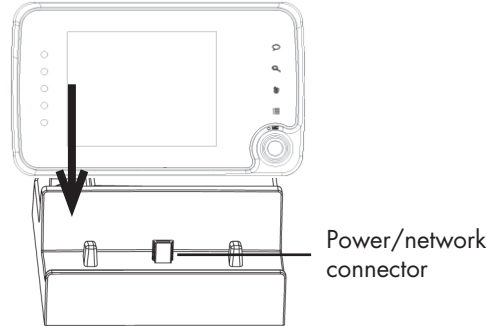

**The monitor will charge when connected to the cradle.**  
It takes 5 hours to fully charge the monitor.

**6** Download the free **Lorex Care** app for iOS or Android™ on your smartphone or tablet.



**See reverse to complete setup.**

**ATTENTION**

When someone is connected to the cameras using a smartphone or tablet, recording is stopped and you will not be able to use the buttons or menus on the handheld monitor.

See the WiFi Remote Connection Cradle User Guide for more information.

## iPhone®/iPad® Setup

OR


## Android™ Setup

- 1 Touch the **Lorex Care** icon to launch the app.



- 2 Add Device
- Add QRCode Tap QRCode

- 3 Scan the QR code on the side of the cradle using your device's camera.

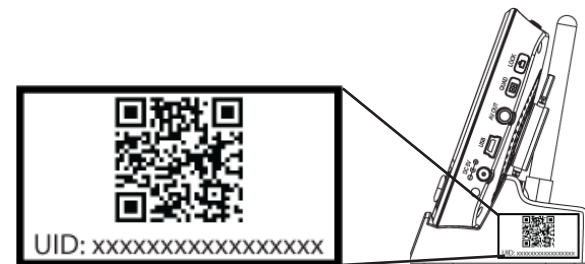

**NOTE:** If your device does not have a camera, Tap **Add** and manually enter the **UID** printed below the QR code on the side of the cradle.

- 4 Add Device
- Name Device Enter a name for your system
- UID Device UID Enter the default password **000000**
- Password Device Password

- 5 Add Device
- Tap Save

- 6 Device List
- Select your device to connect

The app will connect to your system and stream live video from your cameras.


- 1 Touch the **Lorex Care** icon to launch the app.



- 2 Lorex Care
- Click here to add device Tap Click here to add device

- 3 Add Device
- Device Setting
- UID: Tap Scan

- 4 Scan the QR code on the side of the cradle using your device's camera.

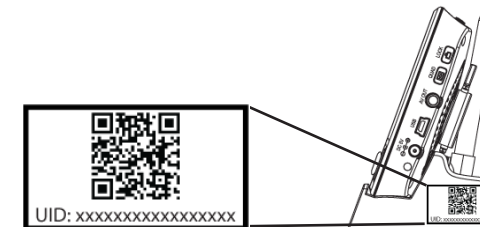

**NOTE:** You may be prompted to select the app that will be used to scan the QR code. Select **Google** and press **Always** to continue.

- 5 Add Device
- Device Setting
- UID: NOTE: If your device does not have a camera, Tap **UID** and manually enter the **UID** printed below the QR code on the side of the cradle.
- Scan Search
- Password: Enter the default password **000000**
- Name: Camera Enter a name for your system
- Tap OK

- 6 Lorex Care
- Camera D5G9BME6JUG6ANPMU7LJ Online
- Click here to add device Select your device to connect

The app will connect to your system and stream live video from your cameras.

## iPhone®/iPad® Wi-Fi Setup (Optional)\*


- 1 Open the Device List screen in **Lorex Care**. Press **Back** if you are currently connected to a camera.

- 2 Device List
- Tap next to the cradle

- 3 Edit Device
- Tap Advanced Setting

- 4 Advanced Setting
- Tap WiFi


- 5 The cradle will scan for available Wi-Fi networks.

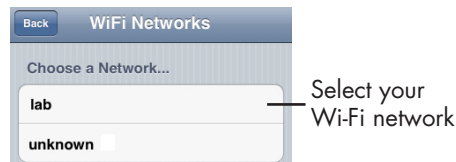

- 6 Enter Password
- Enter the password for your Wi-Fi network then tap **Join**

- 7 Press **Back** 3 times to return to the Device List.

- 8 Remove the Ethernet cable from the cradle.

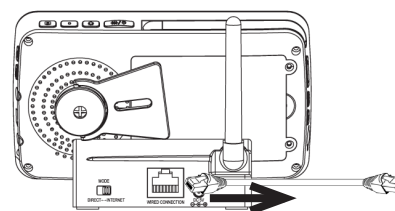

- 9 Device List
- Select your device to connect

Congratulations! You have successfully connected the cradle to your Wi-Fi network. You can now place the cradle in any location with good signal to your Wi-Fi network.

## Android™ Wi-Fi Setup (Optional)\*

- 1 Open the Device List screen in **Lorex Care**. Press **Back** if you are currently connected to a camera.

- 2 Lorex Care
- Tap next to the cradle

- 3 Reconnect Edit Device View Snapshot Remove Device
- Tap Edit Device

- 4 Edit Device
- Device Setting
- UID: D5G9BME6JUG6ANPMU7LJ
- Password: Enter your Wi-Fi network's password
- Name: Camera
- Advanced Setting Tap Advanced


- 5 Advanced Setting
- Video Setting
- Wi-Fi Setting
- Tap Manage Wi-Fi networks

- 6 The cradle scans for available Wi-Fi networks.
- Tap here. Then, select your Wi-Fi network

- 7 Manage Wi-Fi networks
- lab
- Signal strength: 76 %
- Security: WPA2 AES
- Wireless password
- Tap OK

Wait until it says connected under your network's name.

- 8 Tap **OK** twice to return to the Device List.
- 9 Remove the Ethernet cable from the cradle.

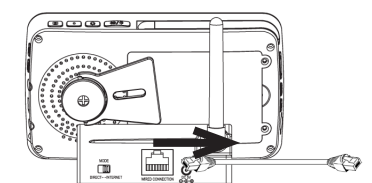

- 10 Lorex Care
- Camera D5G9BME6JUG6ANPMU7LJ Online
- Click here to add device Select your device to connect

Congratulations! You have successfully connected the cradle to your Wi-Fi network. You can now place the cradle in any location with good signal to your Wi-Fi network.